



Economic and Social Council

Distr.: General
17 December 2013
English
English, French and Russian

Economic Commission for Europe

Inland Transport Committee

Working Party on Inland Water Transport

Working Party on the Standardization of Technical and Safety Requirements in Inland Navigation

Forty-fourth session

Geneva, 12–14 February 2014

Item 8 (c) of the provisional agenda

Establishment of common principles and technical requirements for pan-European River Information Services (RIS): International Standard for Tracking and Tracing on Inland Waterways (VTT) (Resolution No. 63)

Draft revised International Standard for Tracking and Tracing on Inland Waterways (VTT) (Resolution No. 63)

Addendum

Transmitted by the Chair of the VTT Expert Group¹

I. Mandate

1. This document contains the updated draft of the revised VTT Standard, based on the exchange of views during the forty-third session of the Working Party on the Standardization of Technical and Safety Requirements in Inland Navigation (SC.3/WP.3) (ECE/TRANS/SC.3/WP.3/86, paras. 37–40) as well as the comments received from the delegations and the Chair of the VTT Expert Group (ECE/TRANS/SC.3/WP.3/2014/10).
2. The modifications to the current text of Resolution No. 63 are marked in bold for new or strikethrough for deleted characters.

¹ This document is submitted in line with the output/activities of cluster 2:6: Inland water transport, para. 1B(h) of the work plan 2012–2016 (ECE/TRANS/2012/12) adopted by the Inland Transport Committee on 1 March 2012 (ECE/TRANS/224, para. 94). Para. 1B(h) provides a mandate for maintenance of resolutions on common principles and technical requirements for a Pan-European River Information Service, such as Resolution No. 63.

3. The Working Party may wish to consider the updated amendment proposal and issue further instructions to the secretariat on preparing the final proposal for the fifty-eighth session of the Working Party on Inland Water Transport.

II. Draft revised International Standard for Tracking and Tracing on Inland Waterways (VTT) (Resolution No. 63)

Resolution No. ...

(adopted by the Working Party on Inland Water Transport on ... October 20...)

The Working Party on Inland Water Transport,

Recalling its Resolution No. 57 on **Guidelines and Recommendations for River Information Services as amended by Resolution No. 73** (TRANS/SC.3/165/Rev.1) and desiring to promote the rapid establishment of harmonized River Information Services on the European inland waterway network,

Believing that the safety and efficiency of vessel traffic and the protection of the environment could be further improved through the establishment of ~~an~~ automatic vessel tracking and tracing systems on all ~~navigable~~ inland waterways of UNECE member States,

Bearing in mind the report of the Working Party on the Standardization of Technical and Safety Requirements in Inland Navigation on its thirtieth session (ECE/TRANS/SC.3/WP.3/60, paras. 9–11),

1. ~~Adopts~~ **Decides to replace the text of the annex of Resolution No. 63 with the text contained in the annex of a uniform Standard on Vessel Tracking and Tracing on Inland Waterways annexed to this resolution,**
2. *Recommends* Governments to base the development and introduction on their ~~navigable~~ inland waterways of systems for vessel tracking and tracing ~~systems~~ on the ~~international standard~~ **technical specifications** reproduced in the annex to this resolution.
3. *Requests* Governments to inform the Executive Secretary of the Economic Commission for Europe whether they accept this resolution,
4. *Requests* the Executive Secretary of the Economic Commission for Europe to place the question of the application of this resolution periodically on the agenda of the Working Party on Inland Water Transport.

Annex

International Standard Technical Specifications for Vessel Tracking and Tracing on Inland Waterways Systems in Inland Navigation

Contents

	<i>Page</i>
Foreword	6
References	8
Abbreviations	10
1. The use of vessel tracking and tracing in inland navigation	13
1.1 Introduction	13
1.2 Scope	14
1.3 Navigation	15
1.3.1 Navigation, medium term ahead	15
1.3.2 Navigation, short term ahead	16
1.3.3 Navigation, very short term ahead	16
1.4 Vessel Traffic Management	17
1.4.1 Vessel Traffic Services (VTS)	17
1.4.1.1 Information service	17
1.4.1.2 Navigational assistance service	18
1.4.1.3 Traffic organization service	19
1.4.2 Lock planning and operation	19
1.4.2.1 Lock planning, long term	19
1.4.2.2 Lock planning, medium term	19
1.4.2.3 Lock operation	20
1.4.3 Bridge planning and operation	21
1.4.3.1 Bridge planning medium term	21
1.4.3.2 Bridge planning short term	21
1.4.3.3 Bridge operation	22
1.5 Calamity abatement	22
1.6 Transport management	23
1.6.1 Voyage planning	23
1.6.2 Transport Logistics	23
1.6.3 Intermodal port and terminal management	24

1.6.4	Cargo and fleet management	24
1.7	Enforcement	25
1.8	Waterway and port infrastructure charges	25
1.9	Fairway information services	25
1.9.1	Weather warnings (EMMA)	26
1.9.2	Signal status	26
1.9.3	Water level	27
1.10	Conclusion	27
2.	Inland AIS Standard	28
2.1	Introduction	28
2.2	Scope	29
2.3	Functional requirements	30
2.3.1	General requirements for Inland AIS	30
2.3.2	Information content	31
2.3.2.1	Static ship vessel information	31
2.3.2.2	Dynamic ship vessel information	31
2.3.2.3	Voyage related ship vessel information	32
2.3.2.4	Traffic management information	32
2.3.2.4.1	ETA at lock/bridge/terminal	33
2.3.2.4.2	RTA at lock/bridge/terminal	33
2.3.2.4.3	Number of persons on board	33
2.3.2.4.4	Signal status	33
2.3.2.4.5	EMMA warnings	33
2.3.2.4.6	Water levels	33
2.3.2.4.7	Safety related messages	33
2.3.3	Reporting interval of information transmission	34
2.3.4	Technology platform	35
2.3.5	Compatibility to IMO with Class A transponders	35
2.3.6	Unique Identifier	35
2.3.7	Application Identifier for Inland AIS application specific messages	36
2.3.8	Application Requirements	36
2.3.9	Type approval	36
2.4	Protocol amendments for Inland AIS	37
2.4.1	Message 1, 2, 3: position reports (ITU-R 1371-4)	37
2.4.2	Message 5: ship static and voyage related data (ITU-R 1371-4).....	39
2.4.3	Message 23, Group Assignment Command (ITU-R M. 1371-42 (PDR))	40

2.4.4	Application of specific messages (ITU-R 1371-4).....	42
2.4.4.1	Allocation of Function Identifiers (FI) within the Inland AIS branch	42
2.4.4.2	Definition of Inland specific Messages	43
2.4.4.2.1	Inland specific Message FI 10: Inland ship vessel static and voyage-related data	43
2.4.4.2.2	Inland specific Message FI 21: ETA at lock/bridge/terminal	44
2.4.4.2.3	Inland specific Message FI 22: RTA at lock/bridge/terminal	45
2.4.4.2.4	Inland specific Message FI 55: number of persons on board	46
2.4.4.2.5	Inland specific Message FI 23: EMMA warning	47
2.4.4.2.6	Inland specific Message FI 24: water levels	49
2.4.4.2.7	Inland specific Message FI 40: signal status	50
Annexes		
A	Definitions	51
A.1	Services	51
A.2	Players	53
B	EMMA Codes	55
C	Example of signal status	56
C.1	Light status	56
C.2	Signal forms	56
D	Proposed D Digital interface sentences for Inland AIS	59
D.1	Input sentences	59
D.2	Inland waterway static ship vessel data	59
D.3	Inland waterway voyage- related vessel ship data	60
E	ERI ship types	62
F	Overview of information required by the user and the data fields, which are available in the defined Inland AIS messages	66

Foreword

The concept of River Information Services (RIS) has emerged from several European research projects, aiming at increasing safety and efficiency of inland waterway transport.

The European Commission, the Central Commission for ~~the~~ Navigation ~~on~~ of the Rhine (CCNR) and the Danube Commission have recognized the need for means of automatic exchange of navigational data between ~~ships~~ vessels and between ~~ships~~ vessels and shore for automatic identification and tracking and tracing solutions in inland navigation.

In maritime navigation, the International Maritime Organization (IMO) has introduced the Automatic Identification System (AIS). All seagoing vessels on international voyage falling under **the provisions of Chapter 5 V, Safety of navigation**, of the International Convention for the Safety of Life at Sea (SOLAS) ~~have to~~ **must** be equipped with AIS since the end of 2004. The Guidelines and Recommendations for River Information Services (RIS Guidelines ~~2004~~ **2011**) of ~~International Navigation the World Association for Waterborne Transport Infrastructure (PIANC), the European Union and CCNR~~ define Inland AIS as important technology and constitute a basis for pan-European Guidelines and Recommendations, adopted by the United Nations Economic Commission for Europe (UNECE) in October 2004 **as Resolution No. 57, and revised in 2012**.

In 2003 the European RIS Platform established ~~in 2003~~ the **international** Expert Group ~~for~~ **on Tracking and Tracing (VTT Expert Group)**. The main task of this ~~expert~~ Group is the development and maintenance of ~~a~~ European-wide harmonized **technical specifications for vessel tracking and tracing standard systems** for inland navigation. Because of mixed traffic areas it is important that the ~~standards~~ **technical specifications** and procedures for inland shipping ~~are~~ **should be** compatible with already defined standards and procedures for seagoing navigation.

To serve the specific requirements of inland navigation, AIS has been further developed to the so-called Inland AIS Standard while preserving full compatibility with IMO's maritime AIS and already existing standards in inland navigation.

Future developments could lead to alternative vessel tracking and tracing systems, which however have to be compatible with maritime AIS.

In this document, chapter 1 describes the functional ~~specifications~~ **requirements** related to vessel tracking and tracing in inland navigation. Chapter 2 describes the Inland AIS standard, including the standard inland tracking and tracing messages. Annexes A–F to ~~this standard~~ **these technical specifications** contain, respectively:

- A. An overview of definitions of services and players
- B. European Multiservice Meteorological Awareness system (EMMA) codes
- C. Examples of signal status
- D. ~~Proposed~~ **D**igital interface sentences for Inland AIS
- E. Electronic Reporting International (ERI) ship types
- F. Overview of information required by the user and the data fields, which are available in the defined AIS messages.

In addition to Inland AIS and maritime AIS, there exists another type of AIS station, AIS Class B station.

AIS Class B stations provide less information, i.e. no inland specific information, and have a lower reporting rate for position information and less transmitter power than Inland AIS mobile stations.

Class B mobile stations may be used on vessels not covered by provisions regulating Inland AIS if this is foreseen in the regulations of the competent authority.

AIS Class B mobile stations used on European inland waterways must meet the following requirements:

1. Recommendation ITU-R M. 1371-4;
2. IEC International Standard 62287 (including DSC channel management);
3. For EU member States, Directive 1999/5/EC (R&TTE).

It is the responsibility of the competent national authority to ascertain the conformity of AIS Class B stations with the above-mentioned standards and requirements prior to issuing an AIS radio licence and assigning a Maritime Mobile Service Identifier (MMSI) number, e.g. type approval of the relevant AIS Class B stations.

References

The content of this document is based on:

<i>Document title</i>	<i>Organization</i>	<i>Publication date</i>
Directive 2005/44/EC of the European Parliament and of the Council of 7 September 2005 on harmonised river information services (RIS) on inland waterways in the community	EU	07.09.2005
Commission Regulation (EC) No 415/2007 of 13 March 2007 concerning the technical specifications for vessel tracking and tracing systems referred to in Article 5 of Directive 2005/44/EC of the European Parliament and of the Council on harmonised river information services (RIS) on inland waterways in the Community	EU	13.03.2007
Commission implementation regulation (EU) No 689/2012 of 27 July 2012 amending Regulation No 415/2007 of 13 March 2007 concerning the technical specifications for vessel tracking and tracing systems referred to in Article 5 of Directive 2005/44/EC of the European Parliament and of the Council on harmonised river information services (RIS) on inland waterways in the Community	EU	27.07.2012
Recommendation on Electronic Chart Display and Information System for Inland Navigation (Inland ECDIS), edition 2.3 , Resolution No. 48, revision 2	UNECE	2002 12.10.2012
Guidelines and Recommendations for River Information Services, edition 3.0 , Resolution No. 57, revised	UNECE	2004 14.10.2011
Guidelines and Criteria for Vessel Traffic Services on Inland Waterways, Resolution No. 58	UNECE	21.10.2004
International Standards for Notices to Skippers and for Electronic Ship Reporting in Inland Navigation, Resolution No. 60 as amended by Resolution No. 70	UNECE	2005 15.10.2010
IMO MSC.74(69) Annex 3, "Recommendation on Performance Standards for a Shipborne Automatic Identification System (AIS)"	IMO	12.05.1998
IMO Resolution A.915(22), "Revised Maritime Policy and Requirements for a future Global Navigation Satellite System (GNSS)"	IMO	2002 29.11.2001
Research project Consortium Operational Management Platform River Information Services (COMPRIS) final report and underlying final work package documents	European Commission	12.02.2006
Recommendation ITU-R M.1371-4, "Technical characteristics for a universal shipborne automatic identification system using time-division multiple access in the VHF maritime mobile band"	ITU	2001 04.2010
International Standard IEC 61993-2, edition 2.0 , "Maritime navigation and radiocommunication equipment and systems – Automatic Identification System (AIS), Part 2: Class A shipborne equipment of the universal automatic identification system (AIS) – Operational and performance requirements, methods of test and required test results "	IEC	2002 19.10.2012
International Standard IEC 61162-Series, "Maritime navigation and radio communication equipment and systems – Digital interfaces"		
"Part 1: Single talker and multiple listeners", 2nd edition	IEC	2000 25.11.2010
"Part 2: Single talker and multiple listeners, high speed transmission"	IEC	09.1998

<i>Document title</i>	<i>Organization</i>	<i>Publication date</i>
United Nations Code for Trade and Transport Locations, UN/LOCODE, 2012-2	UNECE	2006 07.03.2013
Codes for the identification of ships, Recommendation No. 10, second edition	UNECE	19.03.1997
Technical Clarifications on Vessel Tracking and Tracing Standard for Inland Navigation, and Test Standard for Inland AIS	CCNR	
Standard for Electronic Ship Reporting in Inland Navigation edition 1.2	CCNR	19.10.2006

Abbreviations

ADN	European Agreement concerning the International Carriage of Dangerous Goods by Inland Waterways
AI	Application Identifier
AIS	Automatic Identification System
AIS-SART	AIS-Search and Rescue Transmitter
AI-IP	Automatic Identification via Internet Protocol
AND-D	European Agreement concerning the International Carriage of Dangerous Goods on the Danube
ADN	European Agreement concerning the International Carriage of Dangerous Goods on the Rhine
ASCII	American Standard Code for Information Interchange
ATIS	Automatic Transmitter Identification System
A to N AtoN	Aids to Navigation
CCNR	Central Commission for the Navigation of the Rhine
CEVNI	European Code for Inland Waterways
COG	Course over Ground
COMPRIS	Consortium Operational Management Platform River Information Services
CSTDMA	Carrier Sense Time Division Multiple Access
DAC	Designated Area Code
DC	Danube Commission
DGNSS	Differential GNSS
DSC	Digital Selective Calling
DTE	Data Terminal Equipment
ECDIS	Electronic Chart Display and Information System
EMMA	European Multiservice Meteorological Awareness System
ENI	Unique European Vessel Identification Number
ERI	Electronic Reporting International
EPFS	Electronic Position Fixing System
ETA	Estimated Time of Arrival
FI	Functional Identifier
GLONASS	(Russian) Global Navigation Satellite System
GIW	Reference water level in Germany (Gleichwertiger Wasserstand)
GNSS	Global Navigation Satellite System
GPRS	General Packet Radio Service

GPS	Global Positioning System
GSM	Global System for Mobile communication
GUI	Graphical User Interface
HDG	Heading
HSC	High-Speed Craft
IAI	International Application Identifier
IANA	Internet Assigned Numbers Authority
IALA	International Association of Lighthouse Authorities
ID	Identifier
IEC	International Electrotechnical Commission
IEEE	Institute of Electrical and Electronics Engineers
IETF	Internet Engineering Task Force
IMO	International Maritime Organization
IP	Internet Protocol
ITU	International Telecommunication Union
MHz	Megahertz (Megacycles per second)
MID	Maritime Identification Digits
MKD	Minimum Keyboard and Display
MMSI	Maritime Mobile Service Identifier
OLR	Overeen gekomen lage Rivierstand (reference water level in the Netherlands)
PA	Position Accuracy
PI	Presentation Interface
PIANC	International Navigation Association World Association for Waterborne Transport Infrastructure
RAI	Regional Application Identifier
RAIM	Receiver Autonomous Integrity Monitoring
RIS	River Information Services
RNW	Regulierungs Niederwasser (granted water level during 94 % the year)
ROT	Rate of Turn
RTA	Requested Time of Arrival
RTCM SC 104	Radio Technical Commission for Maritime Services Special Committee on Differential Global Navigation Satellite Systems (DGNSS)
Rx	Receiver
SAR	Search and Rescue

SOG	Speed over Ground
SOLAS	International Convention for the Safety of Life at Sea
SOTDMA	Self Organizing - Organized Time Division Multiple Access
SQRT	Square Root
SSD	Ship Static Data
STI	Strategic Traffic Image
TDMA	Time Division Multiple Access
TI	Rate of Turn Indicator
TTI	Tactical Traffic Image
Tx	Transmitter
UDP	User Datagram Protocol
UMTS	Universal Mobile Telecommunications System
UN	United Nations
UN/LOCODE	United Nations Location Code United Nations Code for Trade and Transport Locations
UTC	Universal Time Coordinated
VDL	VHF Data Link
VHF	Very High Frequency
VSD	Voyage Static Data
VTM	Vessel Traffic Management
VTS	Vessel Traffic Services
WGS-84	World Geodetic System from 1984
WiFi	Wireless Fidelity (IEEE 802.11 wireless networking standard)
WIG	Wing-In-Ground craft

1. The use of vessel tracking and tracing in inland navigation

1.1 Introduction

In maritime navigation, IMO has introduced the automatic identification system (AIS). All seagoing vessels on international voyage falling under SOLAS convention Chapter 5V have to be equipped with AIS since the end of 2004. The guidelines for the planning, implementation and operational use of River Information Services define Inland AIS as an important technology. Because of mixed traffic areas it is important that the standards, technical specifications and procedures for inland shipping are must be compatible with already defined standards, technical specifications and procedures for seagoing navigation.

To serve the specific requirements of inland navigation, AIS has been further developed to the so called Inland AIS technical specification while preserving full compatibility with IMO's maritime AIS and already existing standards in inland navigation.

~~In this document chapter 1 describes the functional specifications related to vessel tracking and tracing in inland navigation. In chapter 2 the Inland AIS technical specification is described, including the standard inland tracking and tracing messages. An overview of definitions of services and players is given in annex A: Definitions.~~

The purpose of this **introductory** chapter is to define all necessary functional requirements related to vessel tracking and tracing in inland navigation.

An overview of fields of interest and users is provided **in section 1.2.** ~~and particularly~~ The information needs for each field of interest are described. The functional ~~specifications~~ **requirements** are based on **CEVNI, and other** rules and regulations for navigation **on inland waterways,** ~~based on discussions as well as experts consultations with and based on existing experiences~~ **industry best practices.**

Three groups of information are distinguished:

- Dynamic information;: information changing ~~very often in~~ **every few** seconds or minutes;
- Semi-dynamic information;: information changing ~~just~~ a few times ~~a~~ **per** voyage;
- Static information;: information changing less ~~then~~ **than** a few times ~~a~~ **per** year.

For each group of information different ways of information exchange can be identified:

- Vessel tracking and tracing systems shall exchange particularly ~~the~~ dynamic information;
- Electronic reporting devices, ~~like~~ **such as** e-mail, are meant to exchange the semi-dynamic information;
- Databases are meant to provide static information which can be retrieved via ~~the~~ internet or other data carriers.

~~In the paragraphs below following sections that information is described in detail which can be exchanged by vessel tracking and tracing systems between ships and between ships and shore is described in detail.~~ The information needs are described relating to tracking and tracing. However, for most of the tasks additional information ~~like,~~ **such as**

geographical information, detailed cargo information, address information is required. This kind of information will be provided by other systems.

1.2 Scope

The table below gives an overview of the fields of interest dealt with in this document. Each field of interest is split up into tasks and for each task the users are defined.

Table 1.1
Overview of fields of interest, tasks and users

<i>Field of interest</i>	<i>Task</i>	<i>User</i>
Navigation	Medium term: Looking minutes up to hours ahead, outside onboard radar range	Conning skipper
	Short term: Looking minutes ahead, within onboard radar range	Conning skipper
	Very short term: Looking from seconds up to 1 minute ahead	Conning skipper
Vessel Traffic Management	VTS	VTS operator, conning skipper
	Lock operation	Lock operator, conning skipper
	Lock planning	Lock operator, conning skipper, shipmaster, fleet manager
	Bridge operation	Bridge operator, conning skipper
	Bridge planning	Bridge operator, conning skipper, shipmaster, fleet manager
Calamity Abatement Service		Operator in of calamity centre, VTS operator, lock operator, bridge operator, conning skipper, shipmaster, competent authority
Transport Management	Voyage planning	Shipmaster, freight broker, fleet manager, terminal operator, conning skipper, VTS operator, lock operator, bridge operator, RIS operator
	Transport logistics	Fleet manager, shipmaster, consignor, consignee, supply forwarder
	Port and terminal management	Terminal operator, shipmaster, supply forwarder, port authority, competent authority
	Cargo and fleet management	Fleet manager, consignor, consignee, supply forwarder, freight broker, shipmaster

<i>Field of interest</i>	<i>Task</i>	<i>User</i>
Enforcement	Cross border	Customs, competent authority, shipmaster
	Traffic Safety	Competent authority (police authorities), shipmaster (police authorities)
Waterway and port infrastructure charges		Competent authority, shipmaster, fleet manager, waterway authority
Fairway information services	Meteorological information	Conning skipper
	Signal status	Competent authority, shipmaster, fleet manager
	Water-level	Competent authority, shipmaster, fleet manager, conning skipper

In the following ~~paragraphs~~ **sections**, for each field of interest and tasks the users and the information needs are described in detail.

Note: The order of the information needs within each task does not imply different importance of the information. The accuracy of the information needs is summarized in a table ~~in the last paragraph~~ **at the end of this chapter**.

1.3 Navigation

Vessel tracking and tracing can be used to support the active navigation on board.

The process navigation can be split ~~up~~ into ~~3~~ **three** phases:

- Navigation, medium term ahead;
- Navigation, short term ahead;
- Navigation, very short term ahead.

For each phase the user requirements are different.

1.3.1 Navigation, medium term ahead

Navigation, a medium term ahead is the navigation phase in which the skipper observes and analyses the traffic situation looking some minutes up to an hour ahead and considers the possibilities of where to meet, pass or overhaul other vessels.

The traffic image needed is the typical ‘looking around the corner’ feature and is mainly outside the scope of the onboard radar range.

Exchanged traffic information consists of:

- Identification;
- Name;
- Position (actual);
- Speed over Ground;
- Course over Ground/direction;
- Destination/intended route;
- ~~Ship or combination~~ **Vessel and or convoy** type;

- Dimensions (length and beam);
- Number of blue cones/**lights**;
- Loaded/unloaded;
- Navigational status of the vessel (anchoring, mooring, sailing, restricted by special conditions~~---~~, **etc.**).

The update rate depends on the task and ~~differs from the situation in which the ship is involved~~ **the status of the vessel**. (The maximum update rate is 2 seconds.)

1.3.2 Navigation, short term ahead

Navigation, a short term ahead is the decision phase in the navigation process. In this phase, traffic information has relevance for the process of navigation, including collision avoidance measures, if necessary. This function deals with ~~the observation of~~ other vessels **located** in ~~the close surroundings~~ **proximity of** to the vessel. Exchanged traffic information consists of:

- Identification;
- Name;
- Position (actual);
- Speed over Ground (accuracy 1 km/h);
- Course over Ground/direction;
- Heading;
- ~~Intention~~ **Special manoeuvre indicator** (blue sign)²;
- Destination/intended route;
- ~~Ship / combination~~ **Vessel and or convoy** type;
- Dimensions (length and beam);
- Number of blue cones/**lights**;
- Loaded/unloaded;
- Navigational status of the vessel (anchoring, mooring, sailing, restricted by special conditions~~---~~, **etc.**).

The actual traffic information on position, identification, name, direction, Speed over Ground, course, heading and ~~intention~~ **special manoeuvre indicator** (blue sign) will be exchanged continuously at least every 10 seconds. For some routes, the authorities will set a predefined update rate (maximum 2 seconds).

1.3.3 Navigation, very short term ahead

Navigation, a very short term ahead is the operational navigation process. It consists of execution of the decisions that were made beforehand, on the spot and monitoring ~~its~~ **their** effects. ~~The~~ Traffic information needed from other vessels, especially in this situation, is related to ~~its~~ **the vessel's** own ~~vessel~~ conditions, such as relative position, relative speed, etc.

² This sign is used when vessels agree to cross to starboard (see article 6.04 of the European Code for Inland Waterways (CEVNI)).

In this phase, the following highly accurate information is needed:

- Relative Position;
- Relative Heading;
- Relative Speed;
- Relative Drift;
- Relative Rate of Turn.

Based on the above-mentioned requirements, it becomes clear that **for the time being** ~~from today's point of view~~, very short term navigation cannot make use of tracking and tracing information.

1.4 Vessel Traffic Management

Vessel Traffic Management comprises at least one of the ~~below defined~~ elements **defined below**:

- Vessel Traffic Services;
- Lock planning and operation;
- Bridge planning and operation.

1.4.1 Vessel Traffic Services (VTS)

Within Vessel Traffic Services different services can be distinguished:

- Information service;
- Navigational assistance service;
- Traffic organization service.

In the next paragraphs, ~~the~~ user needs related to traffic information are described.

1.4.1.1 Information service

~~An~~ **The** information service is provided by broadcasting information at fixed times and intervals or when deemed necessary by the VTS or at the request of a vessel, ~~and~~. **Such information** may include, for example, reports on the position, identity and intentions of other traffic; waterway conditions; weather; **navigational** hazards; or any other factors that may influence the vessel's transit.

For information services, an overview of traffic in a network or on a fairway stretch is needed. The traffic information will comprise vessel information ~~like~~ **such as**:

- Identification;
- Name;
- Position (actual);
- Course over Ground/Direction;
- Limitations ~~of~~ navigable space;
- Destination/intended route;
- ~~Ship / combination~~ **Vessel and or convoy** type;
- Dimensions (length and beam);

- Number of blue cones/**lights**;
- Loaded/unloaded;
- Number of persons on board (in case of an incident);
- Navigational status of the vessel (anchoring, mooring, sailing, restricted by special conditions---, **etc.**).

The competent authority ~~will~~ **shall** set the predefined update rate.

1.4.1.2 *Navigational assistance service*

Navigational assistance service informs the ~~master skipper on~~ **about** difficult navigational or meteorological circumstances or ~~assists him~~ **provides assistance** in case of defects or deficiencies. This service is normally rendered at the request of a vessel or by the VTS when deemed necessary.

To provide individual information to a skipper, the VTS operator needs an actual detailed traffic image.

~~The contribution of~~ **Information provided by** vessel tracking and tracing systems is:

- Identification;
- Name;
- Position (actual);
- Speed over Ground;
- Course over Ground/Direction;
- ~~Intention~~ **Special manoeuvre indicator** (blue sign);
- Destination/intended route;
- ~~Ship or combination~~ **Vessel and or convoy type**;
- Dimensions (length and beam);
- Draught;
- Air draught (in case of obstacles);
- Number of blue cones/**lights**;
- Loaded/unloaded;
- Navigational status of the vessel (anchoring, mooring, sailing, restricted by special conditions---, **etc.**).

Any other information needed ~~is~~ **consists of** environmental, geographic information and notices to skippers.

The actual traffic information on identification, position, direction, speed, course and ~~intention~~ **special manoeuvres** (blue sign) has to be exchanged continuously (every 3 **seconds**, almost real time or another predefined update rate set by the competent authority).

All other information ~~had to~~ **shall be made** available on demand of the VTS operator or in special ~~occasions~~ **circumstances** (on event).

1.4.1.3 *Traffic organization service*

The traffic organization service concerns the operational management of traffic and the forward planning of vessel movements to prevent congestion and dangerous situations, and is particularly relevant in times of high traffic density or when the movement of special transports may affect the flow of other traffic. The service may also include establishing and operating a system of traffic clearances or VTS sailing plans or both in relation to priority of movements, allocation of space, mandatory reporting of movements in the VTS area, routes to be followed, speed limits to be observed or other appropriate measures which are considered necessary by the VTS authority. **The traffic organization service requirements on for the traffic image for the traffic organisation service are the same as those described in paragraph section 1.4.1.2 Navigational assistance service.**

1.4.2 **Lock planning and operation**

In the ~~next paragraphs~~ **following sections**, the lock planning processes — long- and medium term — and lock operation process are described.

1.4.2.1 *Lock planning, long term*

Lock planning, ~~a long term ahead,~~ deals with the planning of a lock ~~some a few~~ **hours up to a day ahead.**

In this case, ~~the~~ traffic information is used to improve ~~the~~ information on waiting and passing times at locks, ~~which and~~ are originally based on statistical information.

Traffic information needed for long term lock planning is:

- Identification;
- Name;
- Position (actual);
- Course over Ground/Direction;
- Estimated Time of Arrival (ETA) at lock;
- Requested Time of Arrival (RTA) at lock;
- ~~Ship or combination~~ **Vessel and or convoy** type;
- Dimensions (length and beam);
- Draught;
- Air draught;
- Number of blue cones/**lights**;
- Navigational status of the vessel (anchoring, mooring, sailing, restricted by special conditions—, **etc.**).

The ETA should be available on demand or should be exchanged if a deviation from **the** original ETA is exceeded beyond the value predefined by the competent authority. RTA is the response ~~on to~~ **an** ETA report.

1.4.2.2 *Lock planning, medium term*

Lock planning a medium term ahead deals with the planning of a lock up to ~~2~~ **two or 4 four** lock cycles ahead.

In this case, ~~the~~ traffic information is used to map the arriving vessels to the available lock cycles and ~~based on the planning~~ to inform the skippers about the RTA (Requested Time of Arrival) **based on the planning**.

Traffic information needed for medium term lock planning is:

- Identification;
- Name;
- Position (actual);
- Speed over Ground;
- Course over Ground/Direction;
- ETA at lock;
- RTA at lock;
- ~~Ship or combination~~ **Vessel and or convoy** type;
- Dimensions (length and beam);
- Number of assisting tug boats;
- Draught;
- Air draught;
- Number of blue cones/**lights**;
- Navigational status of the vessel (anchoring, mooring, sailing, restricted by special conditions ~~---~~, **etc.**).

The ETA should be available on demand or should be exchanged if a deviation from **the** original ETA is exceeded beyond the value predefined by the competent authority. All other information should be available ~~one~~ at the **time of** first contact or on demand. RTA is the response ~~on~~ **to** an ETA report.

1.4.2.3 Lock operation

In this phase, the actual locking process takes place.

To facilitate the lock operational process, the following traffic information is required:

- Identification;
- Name;
- Position (actual);
- Speed over Ground;
- Course over Ground/Direction;
- ~~Ship or combination~~ **Vessel and or convoy** type;
- Number of assisting tug boats;
- Dimensions (length and beam);
- Draught;
- Air draught;
- Number of blue cones/**lights**;

- Navigational status of the vessel (anchoring, mooring, sailing, restricted by special conditions—, etc.).

The actual traffic information on identification, position, direction, speed and course ~~has to~~ **must** be exchanged **either** continuously or **at an update rate predefined** by the competent authority ~~set predefined update rate~~.

1.4.3 Bridge planning and operation

In the ~~next paragraphs~~ **following sections**, the bridge planning processes — medium and short term — and bridge operation process are described.

1.4.3.1 Bridge planning, medium term

The bridge planning process ~~in a~~ **the** medium term deals with the optimization of the traffic flow in such a way that the bridges are opened in time for passing of vessels (green wave). The time looking ahead varies between ~~15~~ **fifteen** minutes ~~to and 2~~ **two** hours. The time frame will depend on the local situation.

Traffic information needed for medium term bridge planning is:

- Identification;
- Name;
- Position (actual);
- Speed over Ground;
- Course over Ground/Direction;
- ETA at bridge;
- RTA at bridge;
- ~~Ship or combination~~ **Vessel and or convoy** type;
- Dimensions (length and beam);
- Air draught;
- Navigational status of the vessel (anchoring, mooring, sailing, restricted by special conditions—, etc.).

The ETA and position should be available on demand or should be exchanged if a deviation from **the** original ETA is exceeded beyond the value predefined by the competent authority. All other information should be available ~~once~~ at the **time of** first contact or on demand. RTA is the response ~~on to~~ an ETA report.

1.4.3.2 Bridge planning, short term

In **the** case of short-term bridge planning process, decisions are made ~~upon~~ the strategy for opening of the bridge.

Traffic information needed for short term bridge planning is:

- Identification;
- Name;
- Position (actual);
- Speed over Ground;
- Course over Ground/Direction;

- ETA at bridge;
- RTA at bridge;
- ~~Ship or combination~~ **Vessel and or convoy type;**
- Dimensions (length and beam);
- Air draught;
- Navigational status of the vessel (anchoring, mooring, sailing, restricted by special conditions..., **etc.**).

Actual traffic information on the position, speed and direction, should be available on demand or set at an update rate predefined by the competent authority, e.g. every ~~5~~ **five** minutes. ETA and position should be available on demand or should be exchanged if a deviation from **the** original ETA is exceeded beyond the value predefined by the competent authority. All other information should be available ~~one~~ at the **time of** first contact or on demand. RTA is the response ~~on~~ **to** an ETA report.

1.4.3.3 *Bridge operation*

In this phase the actual opening and passing of the vessel through the bridge takes place. To facilitate this process the following traffic information is required:

- Identification;
- Name;
- Position (actual);
- Speed over Ground;
- Course over Ground/Direction;
- ~~Ship or combination~~ **Vessel and or convoy type;**
- Dimensions (length and beam);
- Air draught.

The actual traffic information on identification, position, direction, speed and course has to be exchanged **either** continuously or **at an update rate predefined** by the competent authority ~~set predefined update rate~~.

1.5 **Calamity Abatement**

Calamity abatement in this context focuses on repressive measures: dealing with real accidents and providing assistance during emergencies. To facilitate this process the following traffic information is required:

- Identification;
- Name;
- Position (actual);
- Course over Ground/Direction;
- Destination;
- ~~Ship or combination~~ **Vessel and or convoy type;**
- Number of blue cones/**lights;**

- Loaded/unloaded;
- Number of persons on board.

In the case of an accident, the traffic information can be provided automatically or on the request ~~by~~ of a calamity fighter.

1.6 Transport Management

This service is divided into four activities:

- Voyage planning;
- Transport logistics;
- Port and terminal management;
- Cargo and fleet management.

1.6.1 Voyage planning

Voyage planning in this context focuses on the **en route** planning ~~on trip~~. During the voyage the skipper will check his original planned voyage.

For this process the following traffic information is needed:

- Position (actual, own vessel);
- Speed over Ground (own vessel);
- Destination/Intended route;
- ETA at lock/bridge/next sector/terminal;
- RTA at lock/bridge/next sector/terminal;
- Dimensions (length and beam) (own vessel);
- Draught (own vessel);
- Air draught (own vessel);
- Loaded/unloaded.

This traffic information is needed on demand or in case of a special event ~~like~~ such as a relevant change in the ETA or RTA.

1.6.2 Transport Logistics

Transport logistics consist of the organization, planning, execution and control of transport.

For these processes, the following traffic information is needed:

- Identification;
- Name;
- Position (actual) (~~100 m up to 1 km~~);
- Course over Ground/Direction;
- ETA at destination.

All traffic information is needed on demand of the ~~ship~~ vessel owner or logistics players.

1.6.3 Intermodal port and terminal management

Intermodal port and terminal management considers the planning of resources in ports and at terminals.

~~The~~ Traffic information needed for these processes is described below:

- Identification;
- Name;
- Position (actual, with accuracy from 100 m up to 1 km);
- Course over Ground/Direction;
- ETA at port/terminal;
- RTA at port/terminal;
- ~~Ship or combination~~ **Vessel and or convoy** type;
- Dimensions (length and beam);
- Number of blue cones/**lights**;
- Loaded/unloaded;
- Navigational status of the vessel (anchoring, mooring, sailing, restricted by special conditions—, **etc.**).

The terminal and port manager will request ~~for~~ traffic information or will agree that in predefined situations ~~the~~ traffic information will be sent automatically.

1.6.4 Cargo and fleet management

Cargo and fleet management considers the planning and optimizes the use of vessels, arranging cargo and transportation.

~~The~~ Traffic information needed for these processes is described below:

- Identification;
- Name;
- Position (actual);
- Course over Ground/Direction (Upstream/downstream);
- Destination;
- ETA at lock/bridge/destination/terminal;
- RTA at lock/bridge/destination/terminal;
- Dimensions (length and beam);
- Loaded/unloaded;
- Navigational status of the vessel (anchoring, mooring, sailing, restricted by special conditions—, **etc.**).

The shipper or ~~ship~~ **vessel** owner will ask for ~~the~~ traffic information or ~~the~~ traffic information will be sent in predefined situations.

1.7 Enforcement

The scope of the enforcement task described below is limited to the services ~~on~~ **concerning** dangerous goods, immigration control and customs.

~~The contribution of~~ **Information provided by** vessel tracking and tracing **systems** is:

- Identification;
- Name;
- Position;
- Course over Ground/Direction;
- Destination/intended route;
- ETA at lock/bridge/border/terminal/destination;
- ~~Ship or combination~~ **Vessel and or convoy** type;
- Number of blue cones/**lights**;
- Number of persons on board;
- Navigational status of the vessel (anchoring, mooring, sailing, restricted by special conditions..., etc.).

~~The~~ Traffic information will be exchanged with **the** appropriate authorities. ~~The~~ Traffic information exchange will take place on demand or at fixed predefined points or at special described circumstances defined by the ~~responsible~~ **competent** authority.

1.8 Waterway and port infrastructure charges

At ~~different~~ **various** locations in Europe, ~~one has to pay~~ **tolls are levied** for the use of the waterway and ports.

~~The~~ Traffic information needed for these processes is described below:

- Identification;
- Name;
- Position;
- Destination/Intended route;
- ~~Ship or combination~~ **Vessel and or convoy** type;
- Dimensions (length and beam);
- Draught.

~~The~~ Traffic information will be exchanged on demand or at fixed points; defined by the ~~responsible~~ **competent** waterway or port authority.

1.9 Fairway information services

~~Related to~~ **In connection with** fairway information services three services are described:

- Weather warnings in case of extreme weather conditions;

- Signal status;
- Water levels.

In the ~~next paragraphs~~ **following sections**, the **information** provided by **tracking and tracing systems information** is described.

1.9.1 Weather warnings (EMMA)

The ~~European~~ ongoing project “EMMA” (European Multiservice Meteorological Awareness System) ~~is dealing with aims at~~ **standardization of** weather warnings. Standardized symbols for meteorological warnings have been developed within the EMMA project and can be used for the display of messages on the Inland Electronic Chart Display and Information System (**Inland ECDIS**) screen.

EMMA does not provide for continuous weather information, but only warnings in case of special meteorological situations. The warnings are provided for regions.

Only km/h (wind), °C (temperature), cm/h (snow), l/m²h (rain) and m (visibility range in fog) may be used for weather warnings.

The following information is needed:

- Start of validity period date;
- End of validity **period** date (indefinite: 99999999);
- Start time of validity;
- End time of validity;
- Fairway section begin and end coordinates (2x);
- Type of weather warning (see annex B);
- Minimum value;
- Maximum value;
- Classification of warning;
- Direction of wind (see annex B).

This information is only exchanged in special events, in case of extreme weather conditions.

1.9.2 Signal status

Vessel tracking and tracing systems can be used for the transmission of status of traffic signals in inland navigation.

~~The~~ Information to be exchanged consists of:

- The position of the signal;
- An identification of the kind of signal (single light, two lights, etc.);
- The direction of impact;
- The current status of the signal.

Examples of signals are given in annex C.

The distribution of ~~the~~ information has to be restricted to a specific area.

1.9.3 Water level

Vessel tracking and tracing systems can be used for the transmission of (actual) water level information:

The Information to be exchanged consists of:

- Gauge station;
- Water level value.

The Information will be sent regularly or on demand.

1.10 Conclusion

The functional specifications requirements describe the user needs and the data needs for each field of interest. Tracking and tracing systems will exchange particularly predominantly the dynamic information.

In Table 1.2 provides an overview is given of the accuracy requirements of the dynamic information related to the tasks described in this chapter.

Table 1.2

Overview of accuracy requirements dynamic data

<i>Required accuracy</i>	<i>Position</i>	<i>Speed over Ground</i>	<i>Course over Ground</i>	<i>Heading</i>
Navigation medium term ahead	15 – 100 m	1 – 5 km/h	-	-
Navigation short term ahead	10 m ³	1 km/h	5°	5°
VTS information service	100 m – 1 km	-	-	-
VTS navigational assistance service	10 m ³	1 km/h	5°	5°
VTS traffic organization service	10 m ³	1 km/h	5°	5°
Lock planning long term	100 m – 1 km	1 km/h	-	-
Lock planning medium term	100 m	0,5 km/h	-	-
Lock operation	1 m	0,5 km/h	3°	-
Bridge planning medium term	100 m – 1 km	1 km/h	-	-
Bridge planning short term	100 m	0,5 km/h	-	-
Bridge operation	1 m	0,5 km/h	3°	-
Voyage planning	15 – 100 m	-	-	-
Transport logistics	100 m – 1 km	-	-	-

³ In addition, the requirements of the IMO Resolution A.915(22) regarding the integrity, the availability and the continuity for position accuracy on inland waterways shall be fulfilled met.

<i>Required accuracy</i>	<i>Position</i>	<i>Speed over Ground</i>	<i>Course over Ground</i>	<i>Heading</i>
Port and terminal management	100 m – 1 km	-	-	-
Cargo and fleet management	100 m – 1 km	-	-	-
Calamity abatement	100 m	-	-	-
Enforcement	100 m – 1 km	-	-	-
Waterway and port infrastructure charges	100 m – 1 km	-	-	-

2. Inland AIS Standard

2.1 Introduction

In maritime navigation, IMO has introduced the Automatic Identification System (AIS). ~~As of 2005~~ all seagoing ships on international voyage falling under SOLAS Convention Chapter ~~5~~ **V, Safety of navigation**, must ~~have been~~ **be** equipped with AIS ~~since the end of 2004~~.

The European Parliament and the Council have adopted Directive 2002/59/EC establishing a community vessel traffic monitoring and information system for seagoing vessels carrying dangerous or polluting goods using AIS for Ship Reporting and Monitoring.

AIS technology is considered ~~as a suitable way that can also be used~~ for automatic identification and vessel tracking and tracing in inland navigation. ~~Especially~~ The real time performance of AIS and the availability of worldwide standards and guidelines are ~~beneficial~~ **particularly valuable** for safety-related applications.

To serve the specific requirements of inland navigation, AIS ~~has~~ to be further developed to the so-called Inland AIS Standard while preserving full compatibility with IMO's ~~maritime~~ **SOLAS** AIS and already existing standards in inland navigation.

Because Inland AIS is compatible with the ~~IMO~~ **SOLAS** AIS, it enables a direct data exchange between seagoing and inland vessels navigating in mixed traffic areas.

Using AIS for automatic identification and vessel tracking and tracing in inland navigation ~~provides~~ **presents the** following features.

AIS is:

- ~~An introduced~~ maritime navigation system **required for all ships falling under the provisions of** ~~according IMO mandatory carriage requirement for all SOLAS vessels;~~
- A system that operates in direct ship-to-ship mode as well as in ~~a~~ ship-to-shore, **and** shore-to-ship mode;
- A safety system with high requirements regarding availability, continuity and reliability **of data;**
- A real-time system due to the direct ship-to-ship data exchange;
- An autonomously operating system, in a self-organized manner, without a master station. There is no need for a central controlling intelligence;

- A system based on international standards and procedures ~~according, i.e.~~ IMO SOLAS chapter V regulations;
- A type approved system ~~to enhance~~ **being** safety of navigation ~~by following through the introduction of~~ a certification procedure;
- A system interoperable with ~~maritime~~ **SOLAS** AIS.

The purpose of this ~~document~~ **chapter** is to define all necessary functional requirements, amendments and extensions to the existing ~~maritime~~ **SOLAS** AIS in order to ~~create~~ **develop** an Inland AIS for use in inland navigation.

2.2 Scope

The Automatic Identification System (AIS) is a shipborne radio data system; exchanging static, dynamic and voyage-related vessel data between equipped vessels and between equipped vessels and shore stations. Shipborne AIS stations broadcast the vessel's identity, position and other data at regular intervals. By receiving these transmissions, shipborne or shore-based AIS stations within the radio range can automatically locate, identify and track AIS-equipped vessels on an appropriate display, ~~like~~ **such as** a radar or Inland ECDIS. AIS systems are intended to enhance safety of navigation in ship-to-ship use, surveillance (VTS), vessel tracking and tracing, and calamity abatement support.

Several types of AIS stations can be distinguished:

- Class A mobile stations to be used by all sea going vessels falling under the ~~IMO~~ SOLAS Chapter V carriage requirements;
- Class B SO/CS mobile stations with limited functionality to be used ~~by~~ **on** e.g. pleasure crafts;
- Class A derivatives, having full Class A functionality on Very High Frequency Data Link (VDL) level, ~~may deviate in~~ **with certain** supplementary functions ~~and can~~ **allowing them to** be used by all vessels not falling under ~~IMO~~ SOLAS carriage requirements (e.g. tugs, pilot vessels, inland vessels) (~~to be called – hereafter~~ **Inland AIS in this document**);
- Base stations, including shore-based simplex and duplex repeater stations.

The following modes of operation can be distinguished:

- Ship – ship operation: All AIS-equipped vessels are able to receive static and dynamic information from all other AIS-equipped vessels within the radio range;
- Ship – shore operation: Data from AIS-equipped vessels can also be received by AIS base stations connected to the RIS centre where a traffic image (Tactical Traffic Image (TTI) and/or Strategic Traffic Image (STI)) can be generated;
- Shore – ship operation: safety-related data from shore to vessel ~~could~~ **can** be transmitted.

A characteristic of AIS is the autonomous mode, using Self Organizing Time Division Multiple Access (SOTDMA) without any need for an organizing master station. The radio protocol is designed in a way that vessel stations operate autonomously in a self-organized manner by exchanging link access parameters. Time is divided into 1 minute frames with 2-250 time slots per radio channel which are synchronized by Universal Time Coordinated (UTC) time of Global Navigation Satellite System (GNSS). Each participant organizes ~~its~~ **their** access to the radio channel by choosing free time slots considering the

future use of time slots by other stations. There is no need for a central intelligence controlling the slot assignment.

An Inland AIS station consists in general of the following components:

- (a) Very High Frequency (VHF) transceiver (1 transmitter/2 receivers);
- (b) GNSS receiver;
- (c) Data processor.

Universal shipborne AIS, as defined by IMO, ITU and IEC, and recommended for ~~the~~ use in inland navigation, uses SOTDMA in the VHF maritime mobile band. AIS operates on the internationally designated VHF frequencies AIS 1 (161,975 MHz) and AIS 2 (162,025 MHz), and can be switched to other frequencies in the VHF maritime mobile band.

To serve the specific requirements of inland navigation, AIS ~~has to be~~ **been** further developed to the so-called Inland AIS while preserving **full** compatibility with ~~IMO's maritime~~ **SOLAS AIS and already existing standards in inland navigation.**

Vessel tracking and tracing systems in inland navigation shall be compatible with ~~maritime~~ **SOLAS AIS, as defined by IMO.** Therefore, AIS messages should contain:

- (a) Static information, such as official ship number, call sign of vessel, name of vessel, type of vessel;
- (b) Dynamic information, such as vessel's position with accuracy indication and integrity status;
- (c) Voyage-related information, such as length and beam of vessel ~~combination~~ **or convoy, presence of** hazardous cargo on board;
- (d) Inland navigation specific information, e.g. number of blue cones/lights according to ~~ADN/ADNR~~ or Estimated Time of Arrival (ETA) at lock/bridge/terminal/ border.

For moving vessels an update rate for ~~the~~ dynamic information on tactical level can be switched between SOLAS mode and inland **waterway** mode. In inland waterway mode, it ~~can~~ **may** be assigned between ~~increased up to once every 2 two seconds and 10 minutes.~~

For vessels at anchor, it is recommended to have an update rate of several minutes, or ~~if~~ **when** information is amended.

AIS is an additional source for navigational information. ~~As such AIS is not used as a substitute for~~ ~~does not replace, but supports~~ navigational services such as radar target tracking and VTS, **but rather provides additional support to them. A key advantage of AIS has its strength as a means of** **lies in enabling the** surveillance and tracking of vessels equipped with it. Due to their different characteristics, AIS and radar complement each other.

2.3 Functional requirements

2.3.1 General requirements for Inland AIS

Inland AIS is based on ~~the~~ maritime AIS ~~according to the IMO~~ **developed in accordance with the provisions of SOLAS** ~~regulation.~~

Inland AIS should cover the main functionality of ~~IMO~~ SOLAS AIS while considering the specific requirements ~~for~~ **of** inland navigation.

Inland AIS should be compatible with the ~~IMO~~ SOLAS AIS and should enable a direct data exchange between seagoing and inland vessels navigating in a mixed traffic areas.

~~The following requirements are complementary or additional requirements for Inland AIS, which differs from the IMO SOLAS AIS. Specific requirements for Inland AIS, which are not part of SOLAS AIS, are listed below.~~

The Inland AIS design should take into account the Technical Clarifications on Vessel Tracking and Tracing Standard for Inland Navigation, and Test Standard for Inland AIS.

2.3.2 Information content

Generally, only tracking and tracing and safety-related information ~~shall be~~ is transmitted via Inland AIS. Taking into consideration this requirement Inland AIS messages should contain **the** following information:

Items marked with “*” have to be handled differently ~~as~~ **than** for seagoing ships.

2.3.2.1 ~~Static ship vessel~~ information

~~The~~ Static ~~ship vessel~~ information for inland vessels should have the same parameters and the same structure as ~~in IMO SOLAS AIS as far as it is applicable. Not used~~ **Unused** parameter fields should be set to “not available”.

Inland specific static ~~ship vessel~~ information should be added.

Static ~~ship vessel~~ information is broadcast autonomously from ~~ship the vessel~~ or on demand **and consists of the following:**

- | | |
|---|--|
| • User Identifier (MMSI) | (Standard IMO SOLAS AIS) |
| • Name of Ship | (Standard IMO SOLAS AIS) |
| • Call Sign | (Standard IMO SOLAS AIS) |
| • IMO number * | (Standard IMO SOLAS AIS/not available for Inland ships vessels) |
| • Type of Ship and Cargo * | (Standard IMO SOLAS AIS/amended for Inland AIS) |
| • Overall Length (decimetre accuracy)* | (Standard IMO SOLAS AIS/amended for Inland AIS) |
| • Overall Beam (decimetre accuracy)* | (Standard IMO SOLAS AIS/amended for Inland AIS) |
| • Unique European Vessel Identification Number (ENI) | (Inland AIS extension) |
| • Type of ship vessel or combination convoy (ERI code) | (Inland AIS extension) |
| • Loaded/unloaded vessel | (Inland AIS extension) |

2.3.2.2 ~~Dynamic ship vessel~~ information

~~The~~ Dynamic ship information for inland vessels should have the same parameters and the same structure as ~~in IMO SOLAS AIS as far as it is applicable. Not used~~ **Unused** parameter fields should be set to “not available”.

Inland specific dynamic ~~ship vessel~~ information should be added.

Dynamic ~~ship vessel~~ information is broadcast autonomously from ~~ship the vessel~~ or on demand **and consists of the following:**

- Position (WGS-84) (~~Standard IMO SOLAS AIS~~)
- Speed (SOG) (quality information)* (~~Standard IMO SOLAS AIS~~)
- Course (COG) (quality information)* (~~Standard IMO SOLAS AIS~~)
- Heading (HDG) (quality information)* (~~Standard IMO SOLAS AIS~~)
- Rate of Turn (ROT) (~~Standard IMO SOLAS AIS~~)
- Position Accuracy (GNSS/DGNSS) (~~Standard IMO SOLAS AIS~~)
- Time of ~~el.~~ **electronic** position fixing device (~~Standard IMO SOLAS AIS~~)
- Navigational status (~~Standard IMO SOLAS AIS~~)
- Blue sign ~~set~~ **status** (Inland AIS extension/regional bits in ~~Standard IMO SOLAS AIS~~)
- Quality of speed information (Inland AIS extension/derived from ship sensor or GNSS)
- Quality of course information (Inland AIS extension/derived from ship sensor or GNSS)
- Quality of heading information (Inland AIS extension/derived from certified sensor (e.g. gyro) or uncertified sensor)

2.3.2.3 *Voyage-related ~~ship vessel~~ information*

The Voyage-related ~~ship vessel~~ information for inland vessels should have the same parameters and the same structure as ~~in IMO SOLAS AIS~~ as far as ~~it is~~ applicable. Unused parameter fields should be set to “not available”.

Inland specific voyage-related ~~ship vessel~~ information should be added.

Voyage-related ~~ship vessel~~ information is broadcast autonomously from ~~ship the vessel~~ or on demand **and consists of the following:**

- Destination (ERI location codes) (~~Standard IMO SOLAS AIS~~)
- Category of ~~dangerous~~ **hazardous** cargo (~~Standard IMO SOLAS AIS~~)
- ~~Maximum present static Draught*~~ (~~Standard IMO AIS~~)
- ETA (~~Standard IMO SOLAS AIS~~)
- Maximum present static draught* (~~Standard IMO SOLAS AIS/amended for Inland AIS~~)
- Hazardous cargo classification (Inland AIS extension)
- **Loaded/unloaded vessel** (**Inland AIS extension**)

2.3.2.4 *Traffic management information*

Traffic management information is for specific use in inland navigation. This information is transmitted when required or on demand to/from inland vessels only.

2.3.2.4.1 ETA at lock/bridge/terminal

ETA at lock/bridge/terminal information is transmitted as an addressed message from ship to shore.

- Lock/bridge/terminal ID (UN/LOCODE) (Inland AIS extension)
- ETA at lock/bridge/terminal (Inland AIS extension)
- Number of assisting tugboats (Inland AIS extension)
- ~~Air~~ **Maximum present static air draught** (Inland AIS extension)

2.3.2.4.2 RTA at lock/bridge/terminal

RTA at lock/bridge/terminal information is transmitted as an addressed message from shore to ship.

- Lock/bridge/terminal ID (UN/LOCODE) (Inland AIS extension)
- RTA at lock/bridge/terminal (Inland AIS extension)

2.3.2.4.3 Number of persons on board

The number of persons on board is transmitted preferably as an addressed message from ship to shore on demand or on event.

- Total number of persons on board (~~Standard IMO SOLAS AIS~~)
- Number of crew members on board (Inland AIS extension)
- Number of passengers on board (Inland AIS extension)
- Number of shipboard personnel on board (Inland AIS extension)

2.3.2.4.4 Signal status

Signal status information is transmitted as a broadcast message from shore to ship.

- Signal Position (WGS-84) (Inland AIS extension)
- Signal Form (Inland AIS extension)
- Light Status (Inland AIS extension)

2.3.2.4.5 EMMA warnings

EMMA Warning Information is transmitted as a broadcast message from shore to ship.

- Local weather warnings (Inland AIS extension)

2.3.2.4.6 Water levels

Water level information is transmitted as a broadcast message from shore to ship.

- Local water level information (Inland AIS extension)

2.3.2.4.7 Safety-related messages

Safety-related messages are transmitted when required as broadcast or as addressed messages.

2.3.3 Reporting interval of information transmission

The different information types of Inland AIS should be transmitted with different reporting rates.

For moving vessels in on inland waterway-areas, the reporting rate for the dynamic information can be switched between SOLAS mode and inland waterway mode. In inland **waterway** mode it can be assigned between **increased up to once every 2 two seconds and 10 minutes**. In mixed traffic areas like such as seaports, it ~~should~~ **shall** be possible to decrease the reporting rate for dynamic information by the competent authority to ensure a balance in reporting behaviour between inland vessels and SOLAS ~~vessels~~ **ships**. The reporting behaviour ~~should~~ **shall** be switchable by TDMA commands from a base station (automatic switching by TDMA telecommand via message 23, **Group Assignment Command, ITU-R M. 1371-4**) and by commands from shipborne systems, e.g. Minimum Keyboard and Display (MKD), Electronic Chart Display and Information System (ECDIS) or onboard computer, via interface, e.g. IEC 61162 (automatic switching by shipborne system command). For static and voyage-related information, it is recommended to have a reporting rate of several minutes, on demand, or if information is amended.

The following reporting rates are applicable:

Static ship vessel information	Every 6 minutes, or when data has been amended or on demand
Dynamic ship vessel information	Depends on navigational status and ship operating mode, either inland waterway mode or SOLAS mode (default), see table 2.1
Voyage-related ship vessel information	Every 6 minutes, when data has been amended or on demand
Traffic management information	As required (to be defined by competent authority)
Safety-related messages	As required

Table 2.1

Update rate of dynamic ship information

<i>Ship dynamic conditions</i>	<i>Nominal reporting interval</i>
Ship status "at anchor" and not moving faster than 3 knots	3 minutes ⁴
Ship status "at anchor" and moving faster than 3 knots	10 seconds ⁴
Ship operating in SOLAS mode, moving 0–14 knots	10 seconds ⁴
Ship operating in SOLAS mode, moving 0–14 knots and changing course	3 1/3 seconds ⁴
Ship operating in SOLAS mode, moving 14–23 knots	6 seconds ⁴
Ship operating in SOLAS mode, moving 14–23 knots and changing course	2 seconds

⁴ When a mobile station determines that it is the semaphore (refer to ITU-R M.1371, annex 2, § 3.1.1.4), the reporting rate should increase to once per 2 seconds (refer to ITU-R M.1371, annex 2, § 3.1.3.3.2).

<i>Ship dynamic conditions</i>	<i>Nominal reporting interval</i>
Ship operating in SOLAS mode, moving faster than 23 knots	2 seconds
Ship operating in SOLAS mode, moving faster than 23 knots and changing course	2 seconds
Ship operating in inland waterway mode, moving ⁵	assigned between 2 seconds and 10 minutes seconds

Note: An Inland AIS mobile station operates either in inland waterway mode (group assignment by Message 23) or in SOLAS mode (autonomous mode, no group assignment active).

2.3.4 Technology platform

The technical solution of Inland AIS is based on the same technical standards as ~~IMO SOLAS AIS (see as specified in ITU-R M.1371-4, and IEC 61993-2).~~

The use of Class A mobile station derivatives or Class B “SO” mobile station derivatives using SOTDMA techniques are recommended as a platform for Inland AIS. The use of the Class B “CS” using CSTDMA techniques is not ~~possible~~ **admitted**, because as it does not guarantee the same performance as the Class A or Class B “SO” equipment. **Class B “CS” devices** ~~Neither cannot ensure~~ the successful transmission to radio link ~~be ensured~~ nor ~~does it do they~~ provide the ~~capability~~ **possibility** to send the Inland AIS specific messages defined in ~~this standard~~ **these technical specifications**.⁶

As long as no Class B “SO” devices are available, Inland AIS mobile equipment is a derivative of the maritime AIS Class A mobile equipment ~~according to IMO~~ **in accordance with the provisions of SOLAS regulation.**

All AIS transponders installed on commercial vessels shall meet the requirements of ~~administration~~ **the competent authority** or of a recognized classification society.

2.3.5 Compatibility ~~to~~with ~~IMO~~Class A transponders

Inland AIS transponders must be compliant ~~to~~ **with** IMO Class A transponders and must, therefore, be capable of receiving and processing ~~all IMO SOLAS AIS messages (according to ITU-R M.1371-4 and IALA technical clarifications on ITU-R M.1371-4) and in addition as well as~~ the messages defined in ~~chapter section 2.4 of this standard~~ **these technical specifications**.

The Digital Selective Calling (DSC) transmitting (tx) capability and the provision of an MKD are not required for Inland AIS transponders, **but the MKD functionality as well as the DSC channel management functionality are required.** The Manufacturers may remove the respective hard- and software from the Class A transponders.

⁵ Shall be switched by **the** competent authority using message 23, when **the** ship enters inland waterway area.

⁶ ~~basin administration may, nevertheless, allow the use of the Class B “CS” mobile stations using CSTDMA techniques by pleasure craft and small craft that are not subject to Chapter V SOLAS regulations (ITU-R M.1371-).~~

2.3.6 Unique identifier

In order to guarantee compatibility with maritime vessels, the Maritime Mobile Service Identifier (MMSI) number must be used as a unique station identifier (radio equipment identifier) for the Inland AIS transponders.

2.3.7 Application identifier for Inland AIS application specific messages

To serve the **specific** information requirements for inland navigation, application specific messages are used.

The application specific messages consist of the standard AIS framework (message ID, repeat indicator, source ID, destination ID), the application identifier (AI = DAC + FI) and the data content (variable length up to a given maximum).

The 16-bit application identifier (AI = DAC + FI) consists of a 10-bit Designated Area Code (DAC): international (DAC = 1) or regional (DAC ≥ 10), a 6-bit function identifier (FI) **and** allows for 64 unique application specific messages.

For Inland AIS application specific messages the DAC “200” is used.

Inland AIS application specific messages under the DAC “200” are maintained by ~~CCNR~~ **VVT Expert Group** in order to harmonise the allocation of those messages.

2.3.8 Application requirements

It is necessary to input and display Inland AIS Messages (binary coded). This should be handled by an Application (preferably with a GUI capable of interfacing the AIS transponder) at the Presentation Interface (PI), or in the transponder itself. Possible data conversions (e.g. knots into km/h) or information concerning all ERI codes (location, ship type) should be handled there.

Furthermore the transponder or the relevant application should be capable of storing ~~also the~~ inland specific static data in the internal memory, in order to ~~keep the secure~~ information when the unit is without power supply.

In order to program ~~the~~ inland specific data into the transponder ~~the standard~~ input sentences ~~listed in annex D: Proposed digital interface sentences for Inland AIS~~ are ~~proposed~~ **defined in annex D, Digital interface sentences for Inland AIS.**

~~The~~ Inland AIS equipment shall provide as a minimum an external RTCM SC 104 interface for the input of DGNSS correction and integrity information.

2.3.9 Type approval

~~Inland AIS equipment shall be type-approved according to the Rhine Vessel Inspection Regulations for compliance with the Operational and Performance Requirements, Methods of Test and Required Test Results (Test Standard for Inland AIS).~~

EU: Inland AIS equipment shall be type-approved for compliance with these technical specifications.

2.4 Protocol amendments for Inland AIS

2.4.1 Message 1, 2, 3: Position reports (ITU-R 1371-14 §3.3.8.2.1)

Table 2.2

Position report

Parameter	Number of bits	Description
Message ID	6	Identifier for this Message 1, 2 or 3
Repeat indicator	2	Used by the repeater to indicate how many times a message has been repeated. 0–3; Default = 0 0=default; 3 = do not repeat any more
User ID (MMSI)	30	MMSI number
Navigational status	4	0 = under way using engine, 1 = at anchor, 2 = not under command, 3 = restricted manoeuvrability, 4 = constrained by her draught, 5 = moored, 6 = aground, 7 = engaged in fishing, 8 = under way using engine sailing , 9 = reserved for future amendment of navigational status for ships carrying dangerous goods (DG), harmful substances (HS) or marine pollutants (MP), or IMO hazard or pollutant category C (high-speed craft (HSC)) , 10 = reserved for future amendment of navigational status for ships carrying DG, HS, or MP, or IMO hazard or pollutant category A (wing-in-ground craft (WIG)) ; 11–143 = reserved for future use, 14 = AIS-SART (active) , 15 = not defined = default (also used by AIS-SART under test)
Rate of Turn (ROT _{AIS})	8	0 to +126 = turning right at up to 708° per min or higher 0 to –126 = turning left at up to 708° per min or higher Values between 0 and 708° per min coded by $ROT_{AIS} = 4.733 \text{ SQRT}(ROT_{sensor})$ degrees per min where ROT_{sensor} is the Rate of Turn as input by an external Rate of Turn Indicator (TI). ROT_{AIS} is rounded to the nearest integer value. +127 = turning right at more than 5° per 30 s (No TI available) –127 = turning left at more than 5° per 30 s (No TI available) –128 (80 hex) indicates no turn information available (default). ROT data should not be derived from COG information. +127 (–128 (80 hex) indicates not available, which should be the default). Coded by $ROTAIS = 4.733 \text{ SQRT}(ROTINDICATED)$ degrees/min ROT_{INDICATED} is the Rate of Turn (720 degrees per minute), as indicated by an external sensor. +127 = turning right at 720 degrees per minute or higher; –127 = turning left at 720 degrees per minute or higher.
Speed over Ground	10	Speed over Ground in 1/10 knot steps (0–102.2 knots) 1 023 = not available; 1 022 = 102.2 knots or higher *1
Position Accuracy	1	The Position Accuracy (PA) flag should be determined in accordance with ITU-R M. 1371-4 1 = high (≤ 10 m) 0 = low (> 10 m) 0 = default 1 = high (< 10 m; Differential Mode of e.g. DGNSS receiver) 0 = low (> 10 m; Autonomous Mode of e.g. GNSS receiver or of other Electronic Position Fixing Device); default = 0

<i>Parameter</i>	<i>Number of bits</i>	<i>Description</i>
Longitude	28	Longitude in 1/10 000 min ($\pm 180^\circ$ degrees, East = positive (as per 2's complement), West = negative (as per 2's complement). 181° degrees (6791AC0 hex) = not available = default)
Latitude	27	Latitude in 1/10 000 min ($\pm 90^\circ$ degrees, North = positive (as per 2's complement), South = negative (as per 2's complement). 91° degrees (3412140 hex) = not available = default)
Course over Ground	12	Course over Ground in $1/10^2$ (0–3 599) 3 600 (E10 _h hex) = not available = default 3 601–4 095 should not be used
True Heading	9	Degrees (0–359) (511 indicates not available = default)
Time Stamp	6	UTC second when the report was generated by the Electronic Position Fixing System (EPFS) (0–59, or 60 if Time Stamp is not available, which should also be the default value, or 61 if positioning system is in manual input mode, or 62 if Electronic Position Fixing System operates in estimated (dead reckoning) mode, or 61 if positioning system is in manual input mode or 63 if the positioning system is inoperative)
Special manoeuvre indicator (blue sign)	2	Indication if blue sign is set 0 = not available = default, 1 = no, 2 = yes, 3 = not used *2 0 = not available = default 1 = not engaged in special manoeuvre = blue sign not set 2 = engaged in special manoeuvre = blue sign is set 3 = not used (i.e. regional passing arrangement on inland waterway) *2
Regional Bits	2	Reserved for definition by a competent regional authority. Should be set to zero, if not used for any regional application. Regional applications should not use zero.
Spare	3 4	Not used. Should be set to zero. Reserved for future use.
RAIM flag	1	RAIM (Receiver Autonomous Integrity Monitoring) flag of Electronic Position Fixing Device; 0 = RAIM not in use = default; 1 = RAIM in use) see ITU-R M. 1371-4
Communication State	19	See ITU-R M. 1371-4 table 4.5B
Total number of bits	168	Occupies 1 slot

*1 Knots should be calculated in km/h by external onboard equipment

*2 Should only be evaluated if the report is coming from an Inland AIS vessel and if the information is derived by automatic means (direct connection to switch).

2.4.2 Message 5: Ship static and voyage-related data (ITU-R 1371-4 §3.3.8.2.3)

Table 2.3

Ship static and dynamic data report

Parameter	Number of bits	Description
Message ID	6	Identifier for this Message 5
Repeat indicator	2	Used by the repeater to indicate how many times a message has been repeated. 0-3; Default = 0 0 = default; 3 = do not repeat any more
User ID (MMSI)	30	MMSI number
AIS version indicator	2	0 = Station compliant with AIS Edition 0 Recommendation ITU-R M.1371-1 1 = station compliant with Recommendation ITU-R M.1371-3 AIS Edition 0; 1, 2, and 3
IMO number	30	1-999999999; 0 = not available = default – Not applicable for SAR aircraft *1
Call Sign	42	7 × 6 bit ASCII characters, "@@@@@@" = not available = default. *2
Name	120	Maximum 20 characters 6 bit ASCII, see ITU-R M.1371-4; @@@@@@@@@@@@@@@@@@@@ = not available = default. For SAR aircraft, it should be set to "SAR AIRCRAFT NNNNNNN" where NNNNNNN equals the aircraft registration number
Type of Ship and Cargo	8	0 = not available or no ship = default 1-99 = as defined in ITU-R M.1371-4 § 3.3.8.2.3.2; 100-199 = preserved, for regional use 200-255 = preserved, for future use Not applicable to SAR aircraft *3 2
Dimensions of ship/convoy Overall dimension/reference for position	30	Reference point for reported position; Also indicates the dimension of ship in metres (m) (see ITU-R M.1371-4 Fig. 18 and § 3.3.8.2.3.3) For SAR aircraft, the use of this field may be decided by the responsible administration. If used it should indicate the maximum dimensions of the craft. As default should A = B = C = D be set to "0" *4,5,6 3, 4, 5
Type of Electronic Positioning Fixing Device	4	0 = undefined (default); 1 = GPS 2 = GLONASS 3 = Combined GPS/GLONASS 4 = Loran-C 5 = Chayka 6 = Integrated Navigation System 7 = surveyed 8 = Galileo 9-1415 = not used 15 = internal GNSS
ETA	20	Estimated Time of Arrival; MMDDHHMM UTC Bits 19-16: month; 1-12; 0 = not available = default Bits 15-11: day; 1-31; 0 = not available = default Bits 10-6: hour; 0-23; 24 = not available = default Bits 5-0: minute; 0-59; 60 = not available = default For SAR aircraft, the use of this field may be decided by the responsible administration

<i>Parameter</i>	<i>Number of bits</i>	<i>Description</i>
Maximum present static draught	8	In 1/10 m, 255 = draught 25.5 m or greater, 0 = not available = default; in accordance with IMO Resolution A.851 Not applicable to SAR aircraft, should be set to 0 *§ 4.
Destination	120	Maximum 20 characters using 6-bit ASCII; @@@@@@@@@@@@@@@@@@@@ = not available For SAR aircraft, the use of this field may be decided by the responsible administration *7 6
DTE	1	Data terminal equipment (DTE) ready (0 = available, 1 = not available = default)
Spare	1	Spare. Not used. Should be set to zero. Reserved for future use
Number of bits	424	Occupies 2 slots

*1 should be set to 0 for inland vessels

~~*2 ATIS code should be used for inland vessels~~

~~*3 2~~ best applicable ship type should be used for inland navigation

*4 3 the dimensions should be set to the maximum rectangle size of the convoy

*5 4 the decimetre accuracy of the inland information should be rounded upwards

*6 5 The reference point information has to be taken out of the SSD NMEA-record by distinguishing the field "source identifier". Position reference point information with source identifier AI, has to be stored as internal one. Other source identifiers will lead to reference point information for the external reference point.

*7 6 the UN/LOCODE location codes and ERI terminal codes should be used

2.4.3 Message 23; Group Assignment Command (ITU-R M. 1371-42)(PDR)

The Group Assignment Command is transmitted by a base station when operating as a controlling entity. The message shall be applied to a mobile station within the defined region and as selected by "Ship and Cargo Type" or by "Station Type". The receiving station shall consider all selector fields concurrently. It controls the following operating parameters of a mobile station: transmit/receive mode, reporting interval and the duration of a quiet time.

Table 2.4
Group Assignment Command

<i>Parameter</i>	<i>Number of bits</i>	<i>Description</i>
Message ID	6	Identifier for Message 23; always 23
Repeat indicator	2	Used by the repeater to indicate how many times a message has been repeated. 0-3; 0 = default = 0; 3 = do not repeat any more
Source ID	30	MMSI of assigning station
Spare	2	Spare. shall Should be set to zero. Reserved for future use.
Longitude 1	18	Longitude of area to which the group assignment applies; upper right corner (north-east); in 1/10 min (±180°, East = positive, West = negative).
Latitude 1	17	Latitude of area to which the group assignment applies; upper right corner (north-east); in 1/10 min (±90°, North = positive, South = negative).

<i>Parameter</i>	<i>Number of bits</i>	<i>Description</i>
Longitude 2	18	Longitude of area to which the group assignment applies; lower left corner (south-west); in 1/10 min ($\pm 180^\circ$, East = positive, West = negative).
Latitude 2	17	Latitude of area to which the group assignment applies; lower left corner (south-west); in 1/10 min ($\pm 90^\circ$, North = positive, South = negative).
Station type	4	0 = all types of mobiles (default); 1 = reserved for future use Class A mobile station only ; 2 = all types of Class B mobile stations; 3 = SAR airborne mobile station; 4 = A to N station Class B "SO" mobile stations only ; 5 = Class B "CS" shipborne mobile station only; 6 = inland waterways; 7-9 = regional use; 10 to -15 = for future use
Type of Ship and Cargo Type	8	0 = all types (default) 1...-99 see Table 50, Annex 8 of Draft Revision ITU-R M.1371- 23 4 100...-199 reserved for regional use 200...-255 reserved for future use
Spare	22	Reserved for future use. Not used. Shall Should be set to zero. Reserved for future use.
Tx/Rx mode	2	This parameter commands the respective stations to one of the following modes: 0 = TxA/TxB, RxA/RxB (default); 1 = TxA, RxA/RxB, 2 = TxB, RxA/RxB, 3 = reserved for future use
Reporting interval	4	This parameter commands the respective stations to the reporting interval given in Table 2.5 below.
Quiet time	4	0 = default = no quiet time commanded; 1-15 = quiet time of 1 to 15 min.
Spare	6	Spare. Not used. Shall be set to zero. Reserved for future use
Total number of bits	160	Occupies one time period

Table 2.5
Reporting interval settings for use with Message 23

<i>Reporting interval field setting</i>	<i>Reporting interval for Message 18</i>
0	As given by the autonomous mode
1	10 minutes
2	6 minutes
3	3 minutes
4	1 minute
5	30 seconds
6	15 seconds
7	10 seconds
8	5 seconds

<i>Reporting interval field setting</i>	<i>Reporting interval for Message 18</i>
9	2 seconds Next shorter reporting interval
10	Next longer shorter reporting interval
11	Next longer reporting interval 2 seconds (not applicable to the Class B “CS” stations)
12–15	Reserved for future use

Note: When the dual channel transmission is suspended by Tx/Rx mode command 1 or 2, the ~~resulting required reporting interval is twice the interval given in above table~~ **should be maintained using the remaining transmission channel.**

2.4.4 Application of specific messages (ITU-R 1371-41, ~~§3.3.8.2.4/§3.3.8.2.6~~)

~~For~~ **To enable** the ~~necessary~~ data exchange ~~is required for~~ inland navigation Inland AIS application, specific messages ~~are~~ **have been** defined.

The Regional Application Identifiers (RAI) of the Inland AIS application specific messages consist of the **Designated Area Code (DAC) 200** and Function Identifier (FI) as defined in this section.

2.4.4.1 Allocation of Function Identifiers (FI) within the Inland AIS branch

~~The FIs~~ **Functional Identifiers (FI)** within the Inland AIS branch ~~should~~ **shall** be allocated and used as described in ITU-R M.1371-4-1 ~~table 37B~~. **Every FI within the Inland branch should be allocated to** ~~shall fall within~~ one of the following groups of application fields:

- General Usage (Gen);
- Vessel Traffic Services (VTS);
- Aids- to- Navigation (~~A to N~~ **AtoN**);
- Search and Rescue (SAR).

Table 2.6
FI within the Inland AIS branch

<i>FI</i>	<i>FIG</i>	<i>Name of International Function Message</i>	<i>Sent by</i>	<i>Broadcast</i>	<i>Addressed</i>	<i>Description</i>
10	Gen	Inland ship vessel static and voyage-related data	Ship Vessel Ship Vessel	X		See 2.4.4.2.1 Inland specific Message FI 10: Inland ship vessel static and voyage-related data
21	VTS	ETA at lock/bridge/terminal	Ship Vessel Ship Vessel		X	See 2.4.4.2.2 Inland specific Message FI 21: ETA at lock/bridge/terminal
22	VTS	RTA at lock/bridge/terminal	Shore		X	See 2.4.4.2.3 Inland specific Message FI 22: RTA at lock/bridge/terminal
23	VTS	EMMA warning	Shore	X		See 2.4.4.2.5 Inland specific Message FI 23: EMMA warning

FI	FIG	Name of International Function Message	Sent by	Broadcast	Addressed	Description
24	VTS	Water level	Shore	X		See 2.4.4.2.6 Inland specific Message 24: Water levels
40	A to N AtoN	Signal status	Shore	X		See 2.4.4.2.7 Inland specific Message 40: Signal status
55	SAR	Inland Number of persons on board	Ship Vessel	X	X (preferably)	See 2.4.4.2.4 Inland specific Message FI 55: Number of persons on board

Some FI within the Inland **AIS** branch should be reserved for future use.

2.4.4.2 Definition of inland specific messages

2.4.4.2.1 Inland specific Message FI 10: Inland ~~ship vessel static~~ and voyage-related data

This message should be used by inland vessels only, to broadcast ~~ship vessel static~~ and voyage-related data in addition to Message 5. The message should be sent with binary Message 8 as soon as possible (from the AIS point of view) after Message 5.

Table 2.7

Inland vessel static and voyage-related data report

Parameter	Number of bits	Description
Message ID	6	Identifier for Message 8; always 8
Repeat indicator	2	Used by the repeater to indicate how many times a message has been repeated. 0–3; 0 = default = 0; 3 = do not repeat any more
Source ID	30	MMSI number of source station
Spare	2	Not used. Should be set to zero. Reserved for future use.
Application Identifier	16	As described in Table 2.6
Unique European Vessel Identification Number	48	8*6 bit ASCII characters 000000 = ENI not assigned = default
Length of ship vessel/convoy	13	1–8000 (rest not to be used) length of ship vessel/convoy in 1/10m; 0 = default
Beam of ship vessel/convoy	10	1–1000 (rest not to be used) beam of ship vessel/convoy in 1/10m; 0 = default
Ship or combination Vessel and or convoy type	14	Numeric ERI classification (codes): + Vessel and or convoy type as described in annex E, ERI ship types 0 = not available = default
Hazardous cargo	3	Number of blue cones/lights 0–3; 4 = B flag; 5 = default = unknown
Draught Maximum present static draught	11	1–2000 (rest not to be used) draught in 1/100m, 0 = default = unknown
Loaded/unloaded	2	1 = loaded, 2 = unloaded, 0 = not available/default, 3 should not be used

Binary data

<i>Parameter</i>	<i>Number of bits</i>	<i>Description</i>
Quality of speed information	1	1 = high, 0 = low/GNSS = default *
Quality of course information	1	1 = high, 0 = low/GNSS = default *
Quality of heading information	1	1 = high, 0 = low = default
Spare	8	Not used. Should be set to zero. Reserved for future use.
Total number of bits	168	Occupies 1 slot

* Shall be set to 0 if no type approved sensor (e.g. gyro) is connected to the transponder

The details regarding the ERI ship type coding can be found in annex E.

2.4.4.2.2 Inland specific Message FI 21: ETA at lock/bridge/terminal

This message should be used by inland vessels only, to send an ETA report to a lock, bridge or terminal in order to apply for a time slot in resource planning. The message should be sent with binary Message 6.

An acknowledgement by Inland branch function Message 22 should be received within 15 minutes. Otherwise, the Inland branch function Message 21 should be repeated once.

Table 2.8

ETA at lock/bridge/terminal report

<i>Parameter</i>	<i>Bit</i>	<i>Description</i>
Message ID	6	Identifier for Message 6; always 6
Repeat Indicator	2	Used by the repeater to indicate how many times a message has been repeated. 0–3 ; 0 = default; 3 = do not repeat any more
Source ID	30	MMSI number of source station
Sequence number	2	0–3
Destination ID	30	MMSI number of destination station ¹
Retransmit flag	1	Retransmit flag should be set upon retransmission: 0 = no retransmission = default; 1 = retransmitted.
Spare	1	Not used. Should be set to zero. Reserved for future use.
Application Identifier	16	As described in Table 2.6
UN country code	12	2*6 bit characters; 0 = not available = default
UN location code	18	3*6 bit characters; 0 = not available = default
Fairway section number	30	5*6 bit characters; 0 = not available = default
Terminal code	30	5*6 bit characters; 0 = not available = default
Fairway hectometre	30	5*6 bit characters; 0 = not available = default

Binary data

<i>Parameter</i>	<i>Bit</i>	<i>Description</i>
ETA at lock/bridge/terminal	20	Estimated Time of Arrival; MMDDHHMM UTC Bits 19–16: month; 1–12; 0 = not available = default; Bits 15–11: day; 1–31; 0 = not available = default; Bits 10–6: hour; 0–23; 24 = not available = default; Bits 5–0: minute; 0–59; 60 = not available = default
Number of assisting tugboats	3	0–6, 7 = unknown = default
Air Maximum present static air draught	12	0–4000 (rest not used), in 1/100m, 0 = default = not used
Spare	5	Not used. Should be set to zero. Reserved for future use.
Total number of bits	248	Occupies 2 slots

1 A virtual MMSI number should be used for each country, each national AIS network should route messages addressed to other countries using this virtual MMSI number.

2.4.4.2.3 Inland specific Message FI 22: RTA at lock/bridge/terminal

This message should be sent by base stations only, to assign a RTA at a lock, bridge or terminal to a certain vessel. The message should be sent with binary Message 6 as reply ~~on~~ to Inland branch function Message 21.

Table 2.9

RTA at lock/bridge/terminal report

<i>Parameter</i>	<i>Bit</i>	<i>Description</i>
Message ID	6	Identifier for Message 6; always 6
Repeat indicator	2	Used by the repeater to indicate how many times a message has been repeated. 0–3 ; 0 = default; 3 = do not repeat any more
Source ID	30	MMSI number of source station
Sequence number	2	0–3
Destination ID	30	MMSI number of destination station
Retransmit flag	1	Retransmit flag should be set upon retransmission: 0 = no retransmission = default; 1 = retransmitted.
Spare	1	Not used. Should be set to zero. Reserved for future use.
Application Identifier	16	As described in Table 2.6
UN country code	12	2*6 bit characters; 0 = not available = default
UN location code	18	3*6 bit characters; 0 = not available = default
Fairway section number	30	5*6 bit characters; 0 = not available = default
Terminal code	30	5*6 bit characters; 0 = not available = default
Fairway hectometre	30	5*6 bit characters; 0 = not available = default
RTA at lock/bridge/terminal	20	Recommended Time of Arrival; MMDDHHMM UTC

Binary data

<i>Parameter</i>	<i>Bit</i>	<i>Description</i>
		Bits 19–16: month; 1–12; 0 = not available = default; Bits 15–11: day; 1–31; 0 = not available = default; Bits 10–6: hour; 0–23; 24 = not available = default; Bits 5–0: minute; 0–59; 60 = not available = default
Lock/bridge/terminal status	2	0 = operational 1 = limited operation (e.g. obstructed by technical conditions, only one lock chamber available, etc.) 2 = out of order 3 = not available
Spare	2	Not used. Should be set to zero. Reserved for future use.
Total number of bits	232	Occupies 2 slots

2.4.4.2.4 Inland specific Message FI 55: Number of persons on board

This message should be sent by inland vessels only, to inform about the number of persons (passengers, crew, shipboard personnel) on board. The message should be sent with binary Message 6, preferably on event or on demand, using International Application Identifier (IAI) binary functional Message 2.

Alternatively the standard IMO binary Message “number of persons on board” (IAI number 16) could be used.

Table 2.10

Number of persons on board report

<i>Parameter</i>	<i>Bit</i>	<i>Description</i>
Message ID	6	Identifier for Message 6; always 6
Repeat indicator	2	Used by the repeater to indicate how many times a message has been repeated. 0–3 ; 0 = default; 3 = do not repeat any more
Source ID	30	MMSI number of source station
Sequence number	2	0–3
Destination ID	30	MMSI number of destination station
Retransmit flag	1	Retransmit flag should be set upon retransmission: 0 = no retransmission = default; 1 = retransmitted.
Spare	1	Not used. Should be set to zero. Reserved for future use.
Application Identifier	16	As described in Table 2.6
Number of crew members on board	8	0–254 crew members, 255 = unknown = default
Number of passengers on board	13	0–8190 passengers, 8191 = unknown = default
Number of shipboard personnel on board	8	0–254 shipboard personnel, 255 = unknown = default
Spare	51	Not used, should be set to zero. Reserved for future use.
Total number of bits	168	Occupies 1 slot

The following messages need further discussion:

2.4.4.2.5 Inland specific Message FI 23: EMMA warning

The EMMA warning shall be used to warn skippers using graphical symbols on the **Inland** ECDIS screen of heavy weather conditions. The following message is capable of transmitting the EMMA data using the AIS channel. It will not replace the Notices to Skippers warnings.

This message should be sent by base stations only, to give weather warnings to all vessels in a certain area. The message should be sent with binary Message 8 on demand.

Table 2.11
EMMA warning report

<i>Parameter</i>	<i>Bit</i>	<i>Description</i>
Message ID	6	Identifier for Message 8; always 8
Repeat indicator	2	Used by the repeater to indicate how many times a message has been repeated. 0–3 ; 0 = default; 3 = do not repeat any more
Source ID	30	MMSI number of source station
Spare	2	Not used. Should be set to zero. Reserved for future use.
Application Identifier	16	As described in Table 2.6
Start date	17	Start of validity period (YYYYMMDD), Bits 18–10: year since 2000 1-255; 0 = default) Bits 9–6: month (1–12; 0 = default) Bits 5–1: day (1–31; 0 = default)
End date	17	End of validity period (YYYYMMDD), Bits 18–10: year since 2000 1-255; 0 = default) Bits 9–6: month (1–12; 0 = default) Bits 5–1: day (1–31; 0 = default)
Start time	11	Start time of validity period (HHMM) UTC Bits 11–7: hour (0-23; 24 = default) Bits 6–1: minute (0-59; 60 = default)
End time	11	End time of validity period (HHMM) UTC Bits 11–7: hour (0–23; 24 = default) Bits 6–1: minute (0–59; 60 = default)
Start longitude	28	Begin Start of the fairway section; 0 = not available = default
Start latitude	27	Begin Start of the fairway section; 0 = not available = default
End longitude	28	End of the fairway section; 0 = not available = default
End latitude	27	End of the fairway section; 0 = not available = default
Type	4	Type of weather warning: 0 = default/unknown, others see annex B: EMMA codes Table B.1
Min value	9	Bit 0: 0 = positive, 1 = negative value = default Bits 1–8 = value (0–253; 254 = 254 or greater, 255 = unknown = default)

Binary data

<i>Parameter</i>	<i>Bit</i>	<i>Description</i>
Max value	9	Bit 0: 0 = positive, 1 = negative value = default Bits 1–8 = value (0–253; 254 = 254 or greater, 255 = unknown = default)
Classification	2	classification of warning (0 = unknown/default, 1 = slight, 2 = medium, 3 = strong/heavy) according to annex B: EMMA codes, Table B.2
Wind direction	4	direction of wind: 0 = default/unknown, others see annex B: EMMA codes annex B , Table B.3
Spare	6	Not used. Should be set to zero. Reserved for future use.
Total number of bits	256	Occupies 2 slots

Table 2.12

Weather type code

<i>Code</i>	<i>Description (EN)</i>	<i>AIS</i>
WI	Wind	1
RA	Rain	2
SN	Snow and ice	3
TH	Thunderstorm	4
FO	Fog	5
LT	Low temperature	6
HT	High temperature	7
FL	Flood	8
FI	Fire in the forests	9

Table 2.13

Weather category type code

<i>Code</i>	<i>Description (EN)</i>	<i>AIS</i>
1	Slight	1
2	Medium	2
3	Strong, heavy	3

Table 2.14

Wind direction code

<i>Code</i>	<i>Description (EN)</i>	<i>AIS</i>
N	North	1
NE	North East	2
E	East	3
SE	South East	4

<i>Code</i>	<i>Description (EN)</i>	<i>AIS</i>
S	South	5
SW	South West	6
W	West	7
NW	North West	8

2.4.4.2.6 Inland specific Message **FI 24**: Water levels

This message should be used to inform skippers about actual water levels in their area. It ~~is~~ **contains** additional short-term information to the water levels distributed via Notices to Skippers. The update rate shall be defined by the competent authority. It is possible to transmit the water levels of more than **four** gauges using multiple messages.

This message should be sent by base stations only, to give water level information to all vessels in a certain area. The message should be sent with binary Message 8 at regular intervals.

Table 2.15

Water level report

<i>Parameter</i>	<i>Bit</i>	<i>Description</i>
Message ID	6	Identifier for Message 8; always 8
Repeat indicator	2	Used by the repeater to indicate how many times a message has been repeated. 0-3 ; 0 = default; 3 = do not repeat any more
Source ID	30	MMSI number of source station
Spare	2	Not used. Should be set to zero. Reserved for future use.
Application Identifier	16	As described in Table 2.6
UN country code	12	UN country code using 2*6-bit ASCII characters according to ERI specification; 0 = not available = default
Gauge ID	11	National unique ID of gauge *1 1-2047, 0 = default = unknown
Water level	14	Bit 0: 0 = negative value, 1 = positive value Bits 1- 13 13 : 1-8191, in 1/100m, bits 0-13 = unknown = default *2
Gauge ID	11	National unique ID of gauge * 1 1-2047, 0 = default = unknown
Water level	14	Bit 0: 0 = negative value, 1 = positive value Bits 1- 13 13 : 1-8191, in 1/100m, bits 0-13 = unknown = default *2
Gauge ID	11	National unique ID of gauge * 1 1-2047, 0 = default = unknown
Water level	14	Bit 0: 0 = negative value, 1 = positive value Bits 1- 13 13 : 1-8191, in 1/100m, bits 0-13 = unknown = default *2

Binary data

Gauge ID	11	National unique ID of gauge *1 1-2047, 0 = default = unknown
Water level	14	Bit 0: 0 = negative value, 1 = positive value Bits 1-13: 1-8191, in 1/100m, bits 0-13 = unknown = default *2
Total number of bits 168 Occupies 1 slot		

*1 Should be defined by ERI for each country

*2 Difference value referring to reference waterlevel (GIW in Germany, RNW on the Danube)

2.4.4.2.7 Inland specific Message **FI** 40: Signal status

This message should be sent by base stations only, to inform about the status of different light signals to all vessels in a certain area. The information should be displayed on an external Inland ECDIS display as dynamic symbols. The message should be sent with binary message 8 at regular intervals.

Table 2.16

Signal status report

<i>Parameter</i>	<i>Bit</i>	<i>Description</i>
Message ID	6	Identifier for Message 8; always 8
Repeat indicator	2	Used by the repeater to indicate how many times a message has been repeated. 0-3 ; 0 = default; 3 = do not repeat any more
Source ID	30	MMSI number of source station
Spare	2	Not used. Should be set to zero. Reserved for future use.
Application Identifier	16	As described in Table 2.6
Signal position longitude	28	Longitude in 1/10 000 min ($\pm 180^\circ$ degrees, East = positive, West = negative. 181° degrees (6791AC0 hex) = not available = default)
Signal position latitude	27	Latitude in 1/10 000 min ($\pm 90^\circ$ degrees, North = positive, South = negative, 91° degrees (3412140 hex) = not available = default)
Signal form	4	0,15 = unknown = default, 1-14 signal form according to annex C: Example of signal status
Orientation of signal	9	Degrees (0-359) (511 indicates not available = default).
Direction of impact	3	1 = upstream, 2 = downstream, 3 = to the left bank, 4 = to the right bank, 0 = unknown = default, rest not used
Light status	30	Status (1 to 7) of up to 9 lights (light 1 to light 9 from left to right, 100000000 means colour 1 at light 1) per signal according to annex C: Example of signal status. 000000000 = default, 777777777 maximum, rest not used
Spare	11	Not used. Should be set to zero. Reserved for future use.
Total number of bits 168 Occupies 1 slot		

An example of signal status is given in annex C: Example of signal status.

Annex A

Definitions

A.1 Services

River Information Services (RIS)

A European concept for harmonized information services to support traffic management and transport management in inland navigation, including the interfaces to other transport modes.

Vessel Traffic Management (VTM)

Vessel traffic management is providing information orally, ~~as well as~~ electronically as well as giving directions in interaction with and response to vessels in a traffic flow to optimize the smooth (efficient) and safe transport.

Vessel traffic management should comprise at least one of the below defined elements:

- Vessel traffic services;
- Information services;
- Navigational assistance services;
- Traffic organization service;
- Lock planning (long and medium term);
- Lock operation;
- Bridge planning (medium and short term);
- Bridge operation;
- Navigational information.

Vessel Traffic Services (VTS)

~~Vessel traffic service is a~~ **This service is** implemented by the competent authority, **and** designed to improve the safety and efficiency of vessel traffic and to protect the environment.

The service should have the capability to interact with the traffic and to respond to traffic situations developing in the area.

~~VTS services~~ VTS should comprise at least an information service and may also include others, such as a navigational assistance service, or a traffic organization service, or both, defined as below:

- An information service is a service to ensure that essential information becomes available in time for onboard navigational decision-making.
- A navigational assistance service is a service to assist onboard navigational decision-making and to monitor its effects. Navigational assistance is especially of importance in reduced visibility or difficult meteorological circumstances or in case of defects or deficiencies affecting the radar, steering or propulsion. Navigational

assistance is given in due form of position information at the request of the traffic participant or in special circumstances when deemed necessary by the VTS operator.

- A traffic organization service is a service to prevent the development of dangerous vessel traffic situations by managing of traffic movements and to provide for the safe and efficient movement flow of vessel traffic within the VTS area.

(Source: International Association of Lighthouse Authorities (IALA) VTS guidelines)

VTS area

VTS area is the delineated, formally declared service area of the VTS. A VTS area may be subdivided in sub-areas or sectors. (Source: IALA VTS guidelines)

Navigational information

Navigational information is information provided to the skipper on board to support in onboard decision-making. (Source: IALA VTS guidelines)

Tactical Traffic Information (TTI)

Tactical Traffic Information (TTI) is the information affecting the skipper's or the VTS operator's immediate decisions with respect to in the actual traffic situation and the close geographic surroundings. A tactical traffic image contains position information and specific vessel information of all targets detected by a radar presented on an Electronic Navigational Chart and – if available – enhanced by external Traffic Information, such as the information delivered by an AIS. TTI may be provided on board of a vessel or on shore, e.g. in a VTS Centre. (Source: ~~PIANC RIS guidelines, 2004~~ **Guidelines and Recommendations for River Information Services, Resolution No. 57, revised**)

Strategic Traffic Information (STI)

Strategic Traffic Information (STI) is the information affecting the medium and long term decisions of RIS users. A strategic traffic image contributes to the planning decision capabilities regarding a safe and efficient voyage. A strategic traffic image is produced in a RIS centre and delivered to the users on demand. A strategic traffic image contains all relevant vessels in the RIS area with their characteristics, cargoes and positions, reported by VHF voice reporting or electronic ship reporting, stored in a database and presented in a table or on an electronic map. Strategic Traffic Information may be provided by a RIS/VTS centre or by an office. (Source: ~~PIANC RIS guidelines, 2004~~ **Guidelines and Recommendations for River Information Services, Resolution No. 57, revised**)

(Vessel) Tracking and Tracing

- (Vessel) Tracking means the function of maintaining status information of the vessel, such as the current position and characteristics, and – if needed – combined with information on cargo and consignments.
- (Vessel) Tracing means the retrieving of information concerning the whereabouts of the vessel and – if needed – information on cargo, consignments and equipment. (Source: ~~PIANC RIS guidelines, 2004~~ **Guidelines and Recommendations for River Information Services, Resolution No. 57, revised**)

Vessel traffic monitoring

Vessel traffic monitoring is providing important information relating to the movements of relevant ~~ships~~ vessels in a RIS area. This includes information about ~~ships~~ vessel's identity, position, (type of cargo) and port of destination. (~~new~~)

Logistics

The planning, execution and control of the movement and placement of people and/or goods and the supporting activities related to such movement and placement within a system organized to achieve specific objectives. (Source: Consortium Operational Management Platform River Information Services (COMPRIS) WP8 Standardization)

A.2 Players**Shipmaster**

The person responsible for the overall safety of the vessel, cargo, passengers and crew and thereby for the voyage plan of the vessel and the condition of the vessel, the cargo, respectively passengers and the quality and quantity of the crew.

Conning skipper

The person who navigates the vessel according to voyage plan instructions of the shipmaster. (Source: (COMPRIS) WP2, Architecture)

VTS operator

A person, appropriately qualified by the competent authority, performing one or more tasks contributing to the services of the VTS (Source: IALA **guidelines on VTS guidelines for in Inland Waters**).

The person who monitors and controls the fluent and safe progress of traffic within the area around the VTS Centre. (Source: COMPRIS WP2, Architecture)

Competent authority

The competent authority is the authority made responsible for safety, in whole or in part, by the government, including environmental friendliness and efficiency of vessel traffic. The competent authority usually has the tasks of planning, arranging funding and of commissioning of RIS. (Source: ~~PIANC RIS guidelines, 2004~~ **Guidelines and Recommendations for River Information Services, Resolution No. 57, revised**)

RIS authority

The RIS authority is the authority ~~with the responsibility~~ **responsible** for the management, operation and coordination of ~~the RIS, the~~ interaction with participating vessels and safe and effective provision of the service. (Source: ~~PIANC RIS guidelines, 2004~~ **Guidelines and Recommendations for River Information Services, Resolution No. 57, revised**)

RIS operator

A person performing one or more tasks contributing to the services of RIS. ~~(new)~~

Lock operator

The person who monitors and controls the fluent and safe progress of traffic around and through a lock and who is responsible for the locking process in itself. (Source: COMPRIS WP2, Architecture)

Bridge operator

The person who monitors and controls the fluent and safe progress of traffic around a moveable bridge and who is responsible for the operation of a movable bridge. (Source: COMPRIS WP2, Architecture)

Terminal operator (synonym: stevedore)

A party responsible for the execution of loading, stowing and discharging (unloading) of vessels. (Source: COMPRIS WP8 Standardization)

Fleet manager

A person planning and observing the actual (navigational) status of a number of vessels moving or working under one command or ownership.

Operator in calamity centres of emergency services

The person who monitors, controls and organizes the safe and smooth fighting of accidents, incidents and calamities.

Consignor (synonym: cargo shipper or sender)

The merchant (person) by whom, in whose name or on whose behalf a contract of carriage of goods has been concluded with a carrier or any party by whom, in whose name or on whose behalf the goods are actually delivered to the carrier in relation to the contract of carriage. (Source: COMPRIS WP8 Standardization)

Consignee

The party ~~such as~~ mentioned in the transport document by whom goods, cargo or containers are to be received. (Source: Transport and Logistics Glossary (P&O Nedlloyd) and COMPRIS WP8 Standardization)

Freight broker (Synonym: freight forwarder)

The person responsible on behalf of the transport supplier for the physical transport of the goods to be executed. The freight broker offers transport capacity to shippers on behalf of the transport supplier and is this way mediator between supply forwarder and shipmaster. (Source: COMPRIS WP2, Architecture)

Supply forwarder

The person who is responsible on behalf of the shipper for the organization of the physical transport of the goods that should be exchanged. The supply forwarder offers cargo to transporters on behalf of the shipper. (Source: COMPRIS WP2, Architecture)

Customs

The department of the civil service that deals with the levying of duties and taxes on imported goods from foreign countries and the control over the export and import of goods, e.g. allowed quota **on** prohibited goods. (Source: Transport and Logistics Glossary (P&O Nedlloyd))

Annex B

EMMA codes

Table B.1
Weather_type_code

<i>Code</i>	<i>Description (EN)</i>	<i>Description (DE)</i>	<i>AIS</i>
WI	Wind	Sturm	1
RA	Rain	Regen	2
SN	Snow and ice	Schneefall und/oder Hagel	3
TH	Thunderstorm	Gewitter	4
FO	Fog	Nebel	5
LT	Low temperature	Kälte	6
HT	High temperature	Hitze	7
FL	Flood	Sturmflut	8
FI	Fire in the forests	Waldbrand	9

Table B.2
Weather_category_code

<i>Code</i>	<i>Description (EN)</i>	<i>Description (DE)</i>	<i>AIS</i>
1	Slight	Schwach	1
2	Medium	Mittel, maessig	2
3	Strong, heavy	Stark	3


Table B.3
Wind_direction_code

<i>Code</i>	<i>Description (EN)</i>	<i>Description (DE)</i>	<i>AIS</i>
N	North	Nord	1
NE	North-East	Nordost	2
E	East	Ost	3
SE	South-East	Suedost	4
S	South	Sued	5
SW	South-West	Suedwest	6
W	West	West	7
NW	North-West	Nordwest	8

Annex C

Example of signal status


C.1 Light status


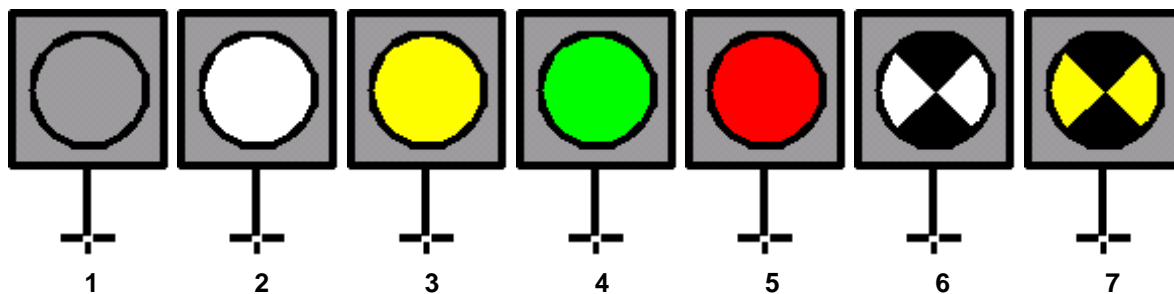



The examples show a grey background in a square of a fixed size of about 3 mm x 3 mm at all display scales with a “post” like it is used for the present static signal in the presentation library. The white point in the centre of the post indicates the position and the post itself allows the user to read the direction of impact. (At a lock, for example, there are often signals for vessels leaving the lock chamber and vessels entering the lock chamber on the inner and the outer side of the door construction). However, the manufacturer of the display software can design the shape of the symbol and the background colour.

The status of a signal can be “no light”, “white”, “yellow”, “green”, “red”, “white flashing” and “yellow flashing” according to CEVNI.

C.2 Signal forms

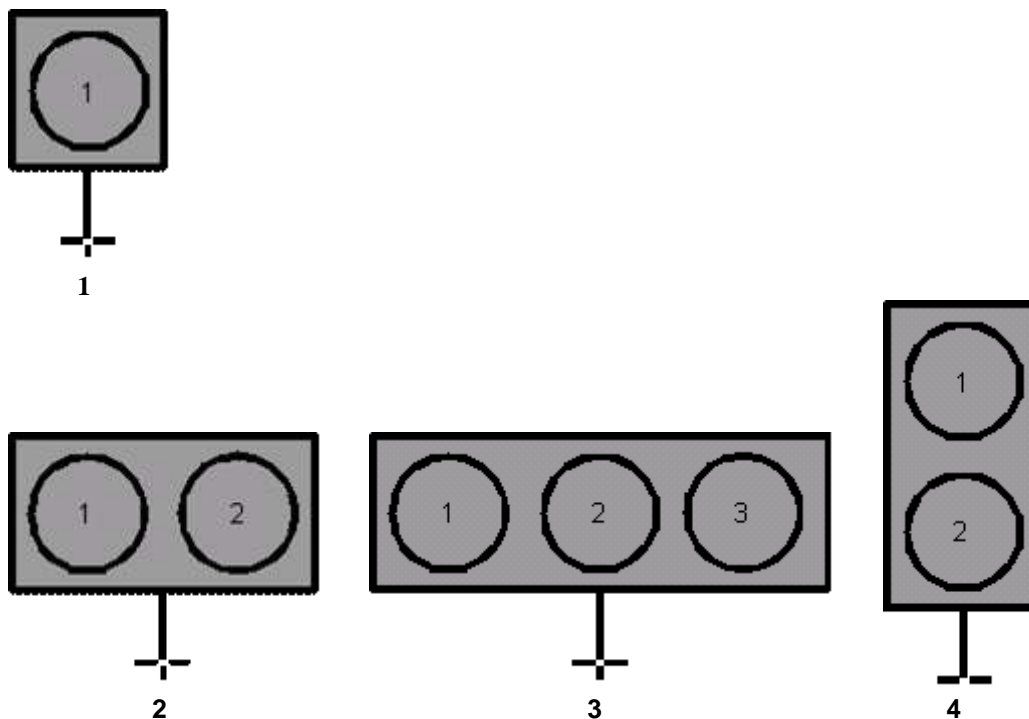

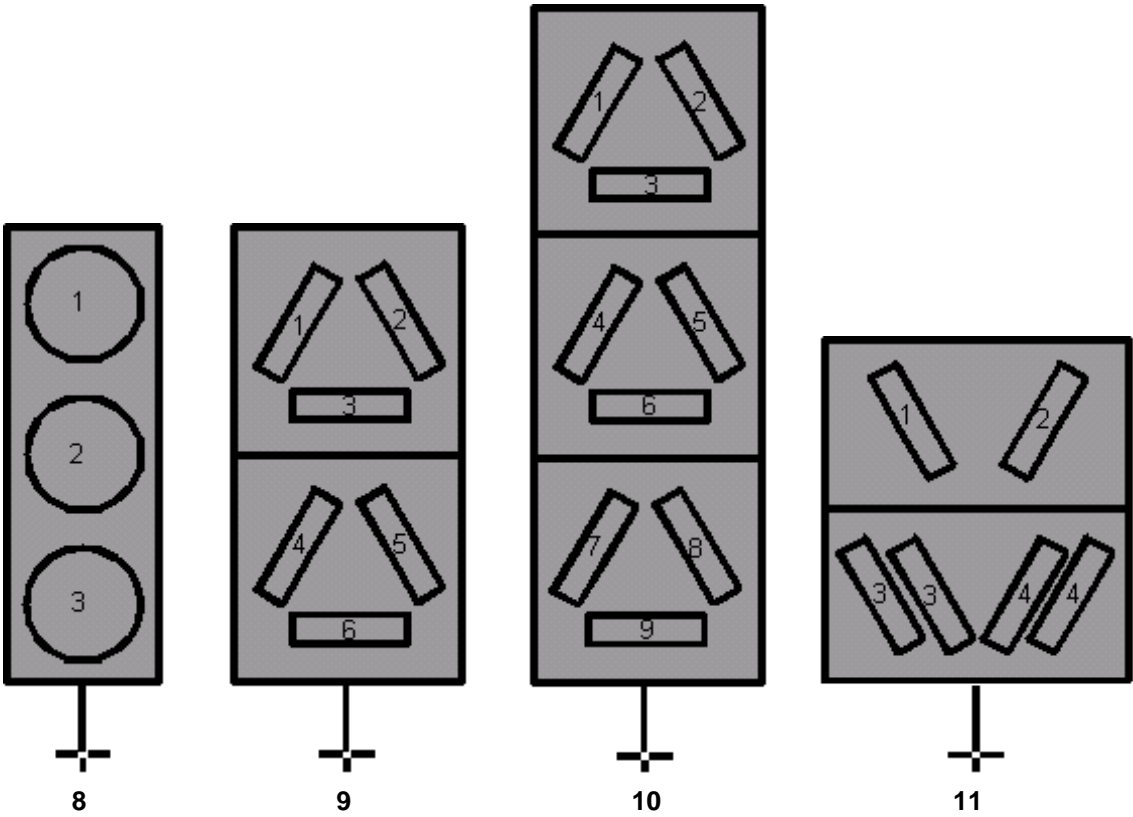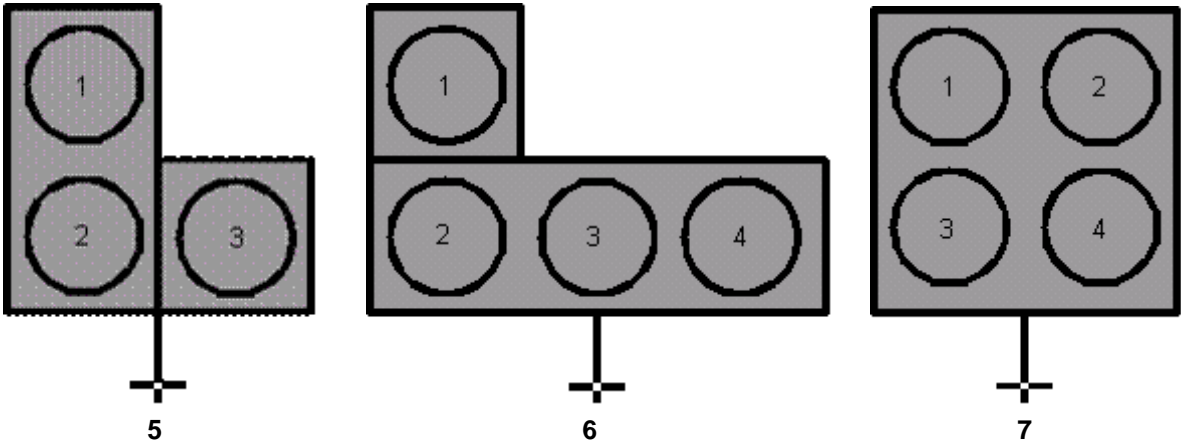

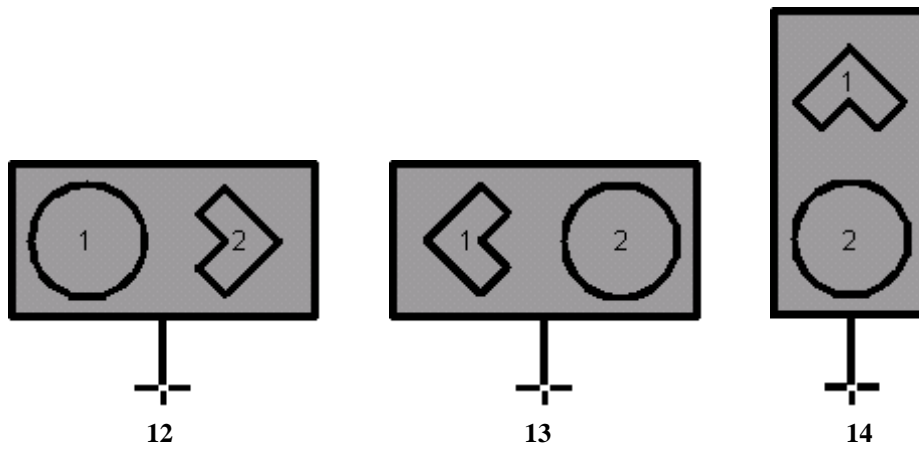

For each of these signals there are a lot of possible combinations of lights. It is required to use:

A number to indicate the kind of signal and

A number for each light on a signal to indicate its status


- 1 = no light,
- 2 = white,
- 3 = yellow,
- 4 = green,
- 5 = red,
- 6 = white flashing and
- 7 = yellow flashing.

Annex D

Proposed ~~d~~Digital interface sentences for Inland AIS

D.1 Input sentences

The serial digital interface of the AIS is supported by existing IEC 61162-1 sentences and new IEC 61162-1 ~~like similar~~ sentences. The detailed descriptions for the digital interface sentences are found in either IEC 61162-1 edition 2, or in "Publicly Available Specification" IEC PAS 61162-100.

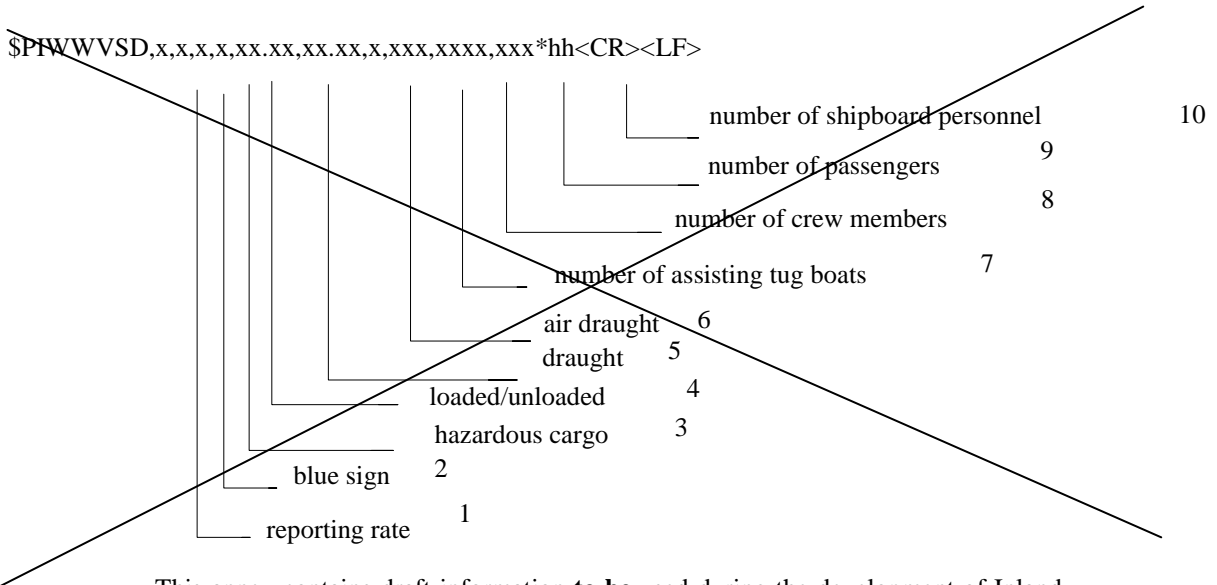


~~This annex contains draft information to be used during the development of Inland AIS in order to input the inland specific data (see 2.4 Protocol Amendments amendments for Inland AIS) into the Inland AIS shipboard unit. New IEC 61162-1 sentences have to be specified. Prior to an adoption of approved sentences for Inland AIS by IEC 61162-1, proprietary sentence should be used.~~

D.2 Inland waterway static ~~ship~~ vessel data

This sentence is used to enter inland navigation static ~~ship~~ vessel data into an Inland AIS unit. For setting the inland static ~~ship~~ vessel data the sentence \$PIWWSSD with the following content is ~~proposed~~ used:

\$PIWWSSD,cccccccc,xxxx,xxx.x,xxx.x,x,x,x*hh<CR><LF>

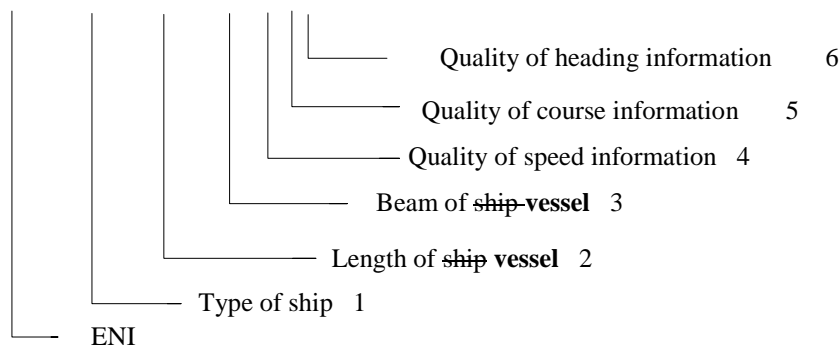


- Note 1: ~~ERI~~ ship type according to ERI classification (see annex E)
- Note 2: length of ~~ship vessel~~ 0 to 800,0 metre
- Note 3: beam of ~~ship vessel~~ 0 to 100,0 metre
- Note 4: quality of speed information 1 = high or 0 = low
- Note 5: quality of course information 1 = high or 0 = low
- Note 6: quality of heading information 1 = high or 0 = low

D.3 Inland waterway voyage-related vessel ~~ship~~ data

This sentence is used to enter inland navigation voyage-related ~~ship vessel~~ data into an Inland AIS unit. For setting the inland voyage-related data the sentence \$PIWWIVD with the following content is ~~proposed~~ used:

\$PIWWIVD,x,x,x,xx.xx,xx.xx,x,xxx,xxxx,xxx*hh<CR><LF>

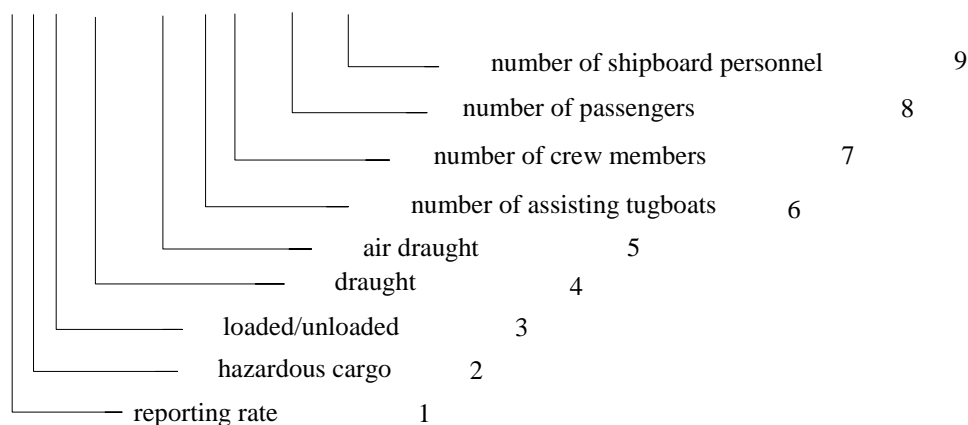


- Note 1: See Table 2.5 Reporting rate settings, default setting: 0
- Note 2: number of blue cones/lights: 0-3, 4 = B flag, 5 = default = unknown
- Note 3: 0 = not available=default, 1 = loaded, 2 = unloaded, rest not used
- Note 4: static draught of ~~ship vessel~~ 0 to 20,00 meters, 0 = unknown = default, rest not used
- Note 5: air draught of ~~ship vessel~~ 0 to 40,00 meters, 0 = unknown = default, rest not used
- Note 6: number of assisting tugboat 0-6, 7 = default = unknown, rest not used
- Note 7: number of crew members on board 0 to 254, 255 = unknown = default, rest not used
- Note 8: number of passengers on board 0 to 8190, 8191 = unknown = default, rest not used
- Note 9: number of shipboard personnel on board 0 to 254, 255 = unknown = default, rest not used

Remark: The ~~former proposed~~ input sentence \$PIWWVSD, which was ~~formerly~~ used in Inland AIS units developed prior ~~to this standard~~ these technical specifications, contains the parameter field "blue

sign” which may raise conflicts with the parameter field “regional application flags” in the \$--VSD sentence according to IEC 61162-1:VSD-AIS voyage static data.

It should no longer be implemented in new AIS transponders. However, for compatibility reasons, it should be supported by external applications.

\$PIWWVSD,x,x,x,x,xx.xx,xx.xx,x,xxx,xxxx,xxx*hh<CR><LF>

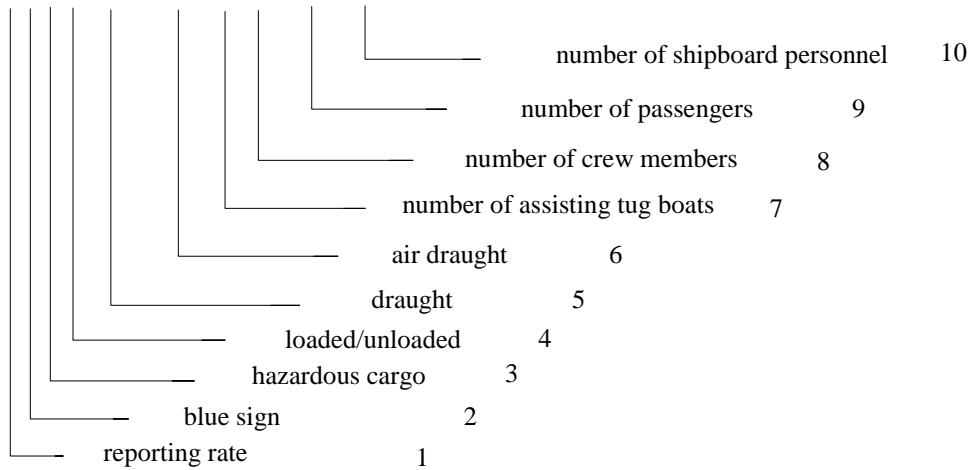

Note 1: 0 = not available = default = factory settings, 1 = SOLAS settings, 2 = Inland waterway settings (2 sec), rest not used

Note 2: 0 = not available = default, 1 = not set, 2 = set, rest not used

Note 3: number of blue cones/lights: 0-3, 4 = B flag, 5 = default = unknown

Note 4: 0 = not available = default, 1 = loaded, 2 = unloaded, rest not used

Note 5: static draught of ship vessel 0 to 20,00 metres, 0 = unknown = default, rest not used

Note 6: air draught of ship vessel 0 to 40,00 metres, 0 = unknown = default, rest not used

Note 7: number of assisting tugboats 0-6, 7 = default = unknown, rest not used

Note 8: number of crew members on board 0 to 254, 255 = unknown = default, rest not used

Note 9: number of passengers on board 0 to 8190, 8191 = unknown = default, rest not used

Note 10: number of shipboard personnel on board 0 to 254, 255 = unknown = default, rest not used

Annex E

ERI ship types

This table should be used to convert the UN ship types, which are used in Inland Message 10 to the IMO types which are used in IMO Message 5.

ERI code			AIS code	
ERI code	U	ship name (EN)	first digit	second digit
8000	No	Vessel, type unknown	9	9
8001	V	Motor freighter	7	9
8020	V	Motor tanker	8	9
8021	V	Motor tanker, liquid cargo, type N	8	0
8022	V	Motor tanker, liquid cargo, type C	8	0
8023	V	Motor tanker, dry cargo as if liquid (e.g. cement)	8	0
8030	V	Container vessel	7	9
8040	V	Gas tanker	8	0
8050	C	Motor freighter, tug	7	9
8060	C	Motor tanker, tug	8	9
8070	C	Motor freighter with one or more ships alongside	7	9
8080	C	Motor freighter with tanker	8	9
8090	C	Motor freighter pushing one or more freighters	7	9
8100	C	Motor freighter pushing at least one tank-ship	8	9
8110	No	Tug, freighter	7	9
8120	No	Tug, tanker	8	9
8130	C	Tug freighter, coupled	3	1
8140	C	Tug, freighter/tanker, coupled	3	1
8150	V	Freightbarge	9	9
8160	V	Tankbarge	9	9
8161	V	Tankbarge, liquid cargo, type N	9	0
8162	V	Tankbarge, liquid cargo, type C	9	0
8163	V	Tankbarge, dry cargo as if liquid (e.g. cement)	9	9
8170	V	Freightbarge with containers	8	9
8180	V	Tankbarge, gas	9	0
8210	C	Pushtow, one cargo barge	7	9
8220	C	Pushtow, two cargo barges	7	9
8230	C	Pushtow, three cargo barges	7	9
8240	C	Pushtow, four cargo barges	7	9
8250	C	Pushtow, five cargo barges	7	9
8260	C	Pushtow, six cargo barges	7	9
8270	C	Pushtow, seven cargo barges	7	9
8280	C	Pushtow, eight cargo barges	7	9
8290	C	Pushtow, nine or more barges	7	9
8310	C	Pushtow, one tank/gas barge	8	0
8320	C	Pushtow, two barges at least one tanker or gas barge	8	0
8330	C	Pushtow, three barges at least one tanker or gas barge	8	0
8340	C	Pushtow, four barges at least one tanker or gas barge	8	0
8350	C	Pushtow, five barges at least one tanker or gas barge	8	0
8360	C	Pushtow, six barges at least one tanker or gas barge	8	0
8370	C	Pushtow, seven barges at least one tanker or gas barge	8	0
8380	C	Pushtow, eight barges at least one tanker or gas barge	8	0
8390	C	Pushtow, nine or more barges at least one tanker or gas barge	8	0
8400	V	Tug, single	5	2
8410	No	Tug, one or more tows	3	1
8420	C	Tug, assisting a vessel or linked combination	3	1
8430	V	Pushboat, single	9	9
8440	V	Passenger ship, ferry, cruise ship, red cross ship	6	9
8441	V	Ferry	6	9
8442	V	Red cross ship	5	8
8443	V	Cruise ship	6	9
8444	V	Passenger ship, without accommodation	6	9
8450	V	Service vessel, police patrol, port service	9	9
8460	V	Vessel, work, maintenance craft, floating derrick, cable-ship, buoy-ship, dredge	3	1
8470	C	Object, towed, not otherwise specified	9	9
8480	V	Fishing boat	3	0
8490	V	Boat/ship	9	9
8500	V	Barge, tanker, chemical	8	0
8510	C	Object, not otherwise specified	9	9
1500	V	General cargo vessel maritime	7	9
1510	V	Unit carrier maritime	7	9
1520	V	Bulk carrier maritime	7	9
1530	V	Tanker	8	0
1540	V	Liquefied gas tanker	8	0
1550	V	Pleasure craft, longer than 20 metres	3	7
1900	V	Yacht	4	9
1910	V	Hydrofoil	4	9

<i>UN ship type</i>				<i>IMO code</i>		
<i>USEV/C</i>	<i>M</i>	<i>Code</i>	<i>Subdivision</i>	<i>Name</i>	<i>First digit</i>	<i>Second digit</i>
No	8	00	0	Vessel, type unknown	9	9
V	8	01	0	Motor freighter	7	9
V	8	02	0	Motor tanker	8	9
V	8	02	1	Motor tanker, liquid cargo, type N	8	0
V	8	02	2	Motor tanker, liquid cargo, type C	8	0
V	8	02	3	Motor tanker, dry cargo	8	9
V	8	03	0	Container vessel	7	9
V	8	04	0	Gas tanker	8	0
C	8	05	0	Motor freighter, tug	7	9
C	8	06	0	Motor tanker, tug	8	9
C	8	07	0	Motor freighter with one or more ships alongside	7	9
C	8	08	0	Motor freighter with tanker	8	9
C	8	09	0	Motor freighter pushing one or more freighters	7	9
C	8	10	0	Motor freighter pushing at least one tank-ship	8	9
No	8	11	0	Tug, freighter	7	9
No	8	12	0	Tug, tanker	8	9
C	8	13	0	Tug, freighter, coupled	3	1
C	8	14	0	Tug, freighter/tanker, coupled	3	1
V	8	15	0	Freightbarge	9	9
V	8	16	0	Tankbarge	9	9
V	8	16	1	Tankbarge, liquid cargo, type N	9	0
V	8	16	2	Tankbarge, liquid cargo, type C	9	0
V	8	16	3	Tankbarge, dry cargo	9	9
V	8	17	0	Freightbarge with containers	8	9
V	8	18	0	Tankbarge, gas	9	0
C	8	21	0	Pushtow, one cargo barge	7	9
C	8	22	0	Pushtow, two cargo barges	7	9
C	8	23	0	Pushtow, three cargo barges	7	9
C	8	24	0	Pushtow, four cargo barges	7	9
C	8	25	0	Pushtow, five cargo barges	7	9
C	8	26	0	Pushtow, six cargo barges	7	9

<i>UN ship type</i>				<i>IMO code</i>		
<i>USEV/C</i>	<i>M</i>	<i>Code</i>	<i>Subdivision</i>	<i>Name</i>	<i>First digit</i>	<i>Second digit</i>
C	8	27	0	Pushtow, seven cargo barges	7	9
C	8	28	0	Pushtow, eight cargo barges	7	9
C	8	29	0	Pushtow, nine cargo barges	7	9
C	8	31	0	Pushtow, one gas/tank barge	8	0
C	8	32	0	Pushtow, two barges at least one tanker or gas barge	8	0
C	8	33	0	Pushtow, three barges at least one tanker or gasbarge	8	0
C	8	34	0	Pushtow, four barges at least one tanker or gasbarge	8	0
C	8	35	0	Pushtow, five barges at least one tanker or gasbarge	8	0
C	8	36	0	Pushtow, six barges at least one tanker or gasbarge	8	0
C	8	37	0	Pushtow, seven barges at least one tanker or gasbarge	8	0
C	8	38	0	Pushtow, eight barges at least one tanker or gasbarge	8	0
C	8	39	0	Pushtow, nine or more barges at least one tanker or gasbarge	8	0
V	8	40	0	Tug, single	5	2
No	8	41	0	Tug, one or more tows	3	1
C	8	42	0	Tug, assisting a vessel or linked combination	3	1
V	8	43	0	Pushboat, single	9	9
V	8	44	0	Passenger ship, ferry, red cross ship, cruise ship	6	9
V	8	44	1	Ferry	6	9
V	8	44	2	Red Cross ship	5	8
V	8	44	3	Cruise ship	6	9
V	8	44	4	Passenger ship without accommodation	6	9
V	8	45	0	Service vessel, police patrol, port services	9	9
V	8	46	0	Vessel, work maintenance craft, floating derrick, cable-ship, buoy-ship, dredge.	3	3
C	8	47	0	Object, towed, not otherwise specified.	9	9
V	8	48	0	Fishing boat	3	0
V	8	49	0	Bunkership	9	9
V	8	50	0	Barge, tanker, chemical	8	0
C	8	51	0	Object, not otherwise specified.	9	9

<i>UN ship type</i>				<i>IMO code</i>		
<i>USEV/C</i>	<i>M</i>	<i>Code</i>	<i>Subdivision</i>	<i>Name</i>	<i>First digit</i>	<i>Second digit</i>
Extra codes for maritime means of transport						
V	1	50	0	General Cargo Vessel Maritime	7	9
V	1	51	0	Unit Carrier Maritime	7	9
V	1	52	0	Bulk Carrier Maritime	7	9
V	1	53	0	Tanker	8	0
V	1	54	0	Liquefied gas tanker	8	0
V	1	85	0	Craft, pleasure longer than 20 meters	3	7
V	1	90	0	Fast ship	4	9
V	1	91	0	Hydrofoil	4	9
V	1	92	0	Catamaran Fast	4	9

Annex F

Overview of information required by the user and the data fields, which are available in the defined Inland AIS messages

<i>Required information by users</i>	<i>Data field in Inland AIS message (Yes or No)</i>
Identification	Yes
Name	Yes
Position	Yes
Speed over Ground	Yes
Course over Ground	Yes
Intention Special manoeuvre indicator (blue sign)	Yes
Direction	Could be derived from course over ground
Destination	Yes
Intended route	Could partly be derived from destination
ETA	Yes
RTA	Yes
Ship or combination Vessel and or convoy type	Yes
Number of assisting tugboats	Yes, could be identified separately
Dimensions (length & beam)	Yes
Draught	Yes
Air draught	Yes
Number of blue cones/ lights	Yes
Loaded/unloaded	Yes
Number of persons on board	Yes
Navigational status	Yes
Limitations on navigational of navigable space	Free text. Is not available
Relative position	Could be calculated based on position information of vessels
Relative speed	Could be calculated based on speed information of vessels
Relative heading	Could be calculated based on heading information of vessels
Relative drift	Is not available
Rate of Turn	Is not available