
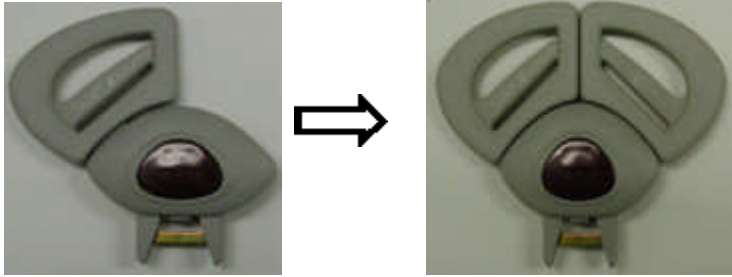

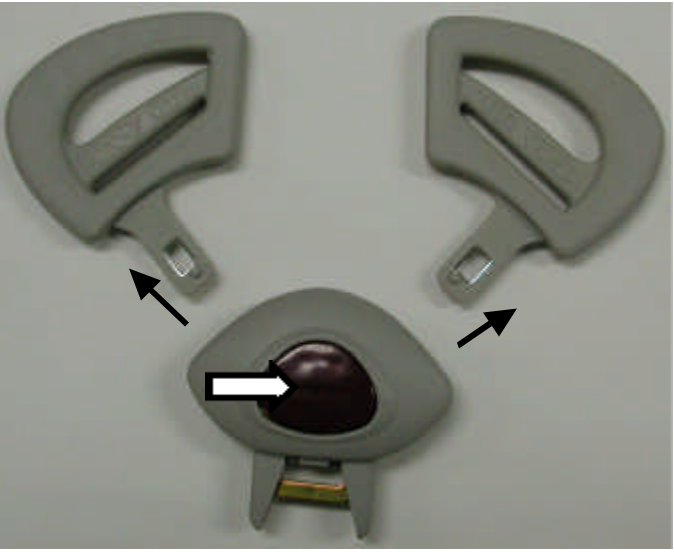

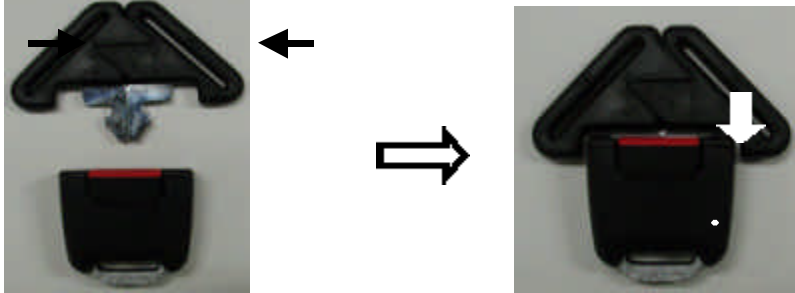

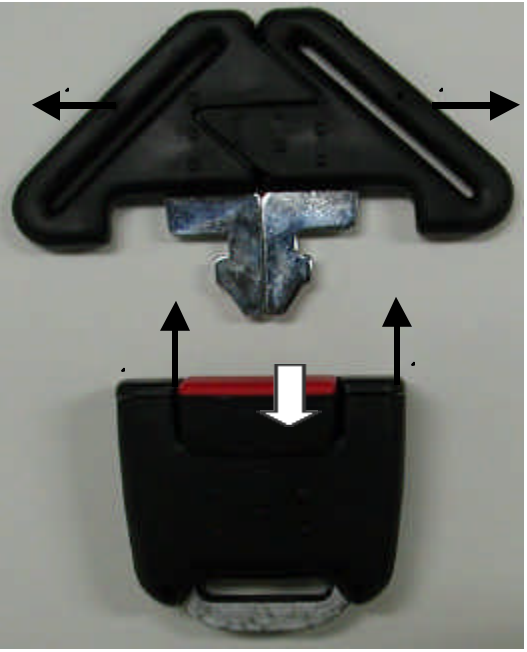


	Buckle/tongue composition	Latch mode	Release mode	Comment
<p>J A P A N</p>	<p>Tongue A Tongue B</p>  <p style="text-align: center;">Buckle</p>	<p>(1) Normal mode - Only latchable in this mode A front B front</p>  <p>(2) Abnormal mode - No latching in all other modes</p> <p>B front A front A reversed B reversed A reversed B reversed</p> 	<p>(1) Both tongues are simultaneously released when the buckle button is pressed.</p> 	<p>. Easy belt wearing due to separate latching of tongues</p> <p>. No latching error due to latching only on normal mode</p> <p>.One-action release operation</p>
<p>E C E</p>	 <p style="text-align: center;">Buckle</p>	<p>...Normal mode - Only latchable in this mode</p>  <p>Setting together of two tongues Both simultaneously latched in buckle</p> <p>(2) Abnormal mode - No latching in all other modes</p> <p>A front B front B reversed A reversed</p> <p>B reversed A reversed</p> 	<p>. Both tongues are released in one set when the buckle button is pressed</p> <p>. The tongues are separated from each other</p> 	<p>. Difficult to set tongues together in some assemblies</p> <p>. No latching error due to latching only on normal mode</p> <p>.Difficult to separate tongues after release in some assemblies (Not suitable for emergency evacuation)</p> 